

Nokia 3650

User Guide

The wireless phone described in this guide is approved for use in GSM 1900 networks.

LEGAL INFORMATION

Part No. , Issue No. 1

Copyright ©2002 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 3650, and the Nokia Original Accessories logos **ADD GAME TMs HERE** are trademarks or registered trademarks of Nokia Corporation. All other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Printed in Canada November/2002

US Patent No 5818437 and other pending patents.

T9 text input software Copyright ©1999-2002. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information in this user guide was written for the Nokia 3650 phone. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your phone may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

The term "IC:" before the certification/registration number only signifies that Industry Canada technical specifications were met.

User Guide for Nokia 3650 Phone

What information is needed?	Numbers	Where is the number?
My number		Wireless service provider
Voice mail number		Wireless service provider
Wireless provider's number		Wireless service provider
Provider's customer care		Wireless service provider
Model number		Label on back of phone (under battery)
Phone type		Back of title page
Electronic serial number (ESN)		Label on back of phone (under battery)

Contents

General information 13

- Register your phone 13
- Understand your phone 13
- Menu 22
- Options lists 23
- Navigation bar - moving horizontally 24
- Actions common to all applications 24
- Volume control 26

Your phone 29

- Make a call 29
- Answer a call 32
- Log - Call log and general log 35
- SIM folder 40
- Memory card 40

Settings 43

- Change general settings 43
- Phone settings 43
- Call settings 45
- Connection settings 47
- Date and time 55
- Security 55
- Call restriction (network service) 59
- Network 60
- Accessory settings 60

Contacts 63

- Create contact cards 63
- Copy contacts between the SIM card and phone memory 63
- Edit contact cards 64
- Options when viewing a contact card 65

Manage contact groups 70

Camera and Images 73

Take pictures 73

Images - Store pictures 77

Video player 83

Video clips 83

Messaging 87

Messaging - General information 88

Write text 90

Create and send new messages 94

Inbox - receive messages 101

My folders 106

Remote mailbox 107

Outbox 112

View messages on a SIM card 113

Cell broadcast (network service) 113

Service command editor 114

Messaging settings 114

Instant messaging 120

Profiles 123

Change the profile 123

Customize profiles 123

Favorites 125

Add shortcuts 125

Calendar and To-do 127

Create calendar entries 127

Set calendar alarms 130

Send calendar entries 131

To-do 131

Extras 133

Calculator 133

Composer	134
Converter	135
Notes	137
Clock	137
Recorder	138
Services (Internet)	139
Basic steps for accessing	139
Set up the phone for the mobile browser	140
view bookmarks	141
End a connection	144
browser settings	145
Tools	147
Manager - install applications and software	147
Applications (Java™)	150
Connectivity	155
Bluetooth connection	155
Infrared connection	161
Connect your phone to a computer	163
Use your phone as a modem to connect to the Internet or to send or receive faxes	163
Reference information	165
Battery statements	165
Use proper care and maintenance	166
Understand Important safety information	167
Use Accessories safely	174
Accessories	174
Glossary!	175
Technical information	177
Troubleshooting	178
Frequently Asked questions (faq)	179
A Guide to Safe and Responsible Wireless Phone Use	

190

Consumer Update on Wireless Phones 194

For your safety

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



INTERFERENCE

All wireless phones may get interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make backup copies of all important data.






CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.





CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.

Network Services

The wireless phone described in this guide is approved for use on the EGSM 900, GSM 1800, and GSM 1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Note: Some networks may not support all language-dependent characters and/or services.

Note: Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7, ACP-8, ACP-9, LCH-9, and LCH-12.

Note: Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

For availability of approved accessories, please check with your dealer.

When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

1 General information

Congratulations on purchasing your Nokia 3650 mobile phone. Your phone provides many functions which are practical for daily use, such as a digital camera, a video recorder, messaging, e-mail, a clock, an alarm clock, a calculator, and a calendar. A variety of Xpress on™ color covers are also available. Your phone can connect to a PC, laptop, or other device using a data cable, bluetooth, or the built-in IR port. For more information on connectivity, refer to the PC Connectivity Guide. The PC Connectivity guide, Nokia PC Suite, and all related software can be downloaded from the U.S. Mobile Phone products section of www.nokia.com.

• REGISTER YOUR PHONE

Make sure to register your phone at www.warranty.nokiausa.com or call 1-888-NOKIA-2U (1-888-665-4228) so that we can serve your needs better if you should need to call the center or have your phone repaired.

E-newsletters


When you register your phone, you can sign up for Nokia's e-newsletter, Nokia Connections. You will receive tips and tricks on using your phone, accessory information, and special offers.

• UNDERSTAND YOUR PHONE



Insert the SIM card and load the battery

- Keep all miniature SIM cards out of the reach of small children.

- Before removing the covers, always switch off the power and disconnect the phone from the charger or any other device. Always store and use the phone with the covers attached.

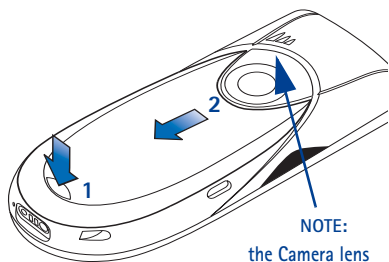


- 1 Open the cover: With the back of the phone facing you, press the locking catch (1) in the direction of the arrow and slide the cover (2).
- 2 Find the SIM card slot (3). Place the SIM card carefully into the slot. Make sure that the bevelled corner on the SIM card is facing towards the bottom of the phone and that the golden contact area on the card is facing downwards.

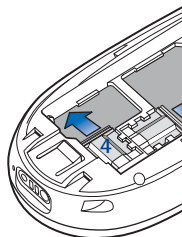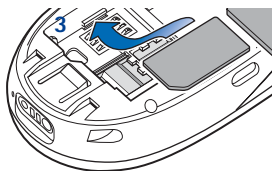

- 3 Slide the silver catch over the SIM card to secure it in its place (4).

- 4 Load the battery (5): Align the golden contacts of the battery with the corresponding connectors on the phone, and push the opposite end of the battery until it snaps into place.

- 5 Replace the cover: Slide the cover back into place.

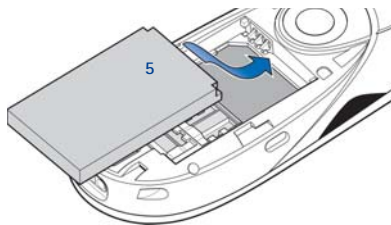


Charge the battery


- 1 Connect the lead to the charger. You will hear it click into place.
- 1 Connect the lead from the charger to the base of the phone (6).
- 2 Connect the charger to an AC wall outlet. The battery indicator bar starts scrolling. Note, that you can use the phone while charging.
- 3 When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the AC outlet and then from the phone. See also "Battery statements" on page 165 in the User Guide.



Note: Remove the battery only when the phone is switched off.


Switch the phone on or off

Press and hold the power key .

 **WARNING!** Do not switch on the phone when wireless phone use is prohibited or when it may cause interference or danger.

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.



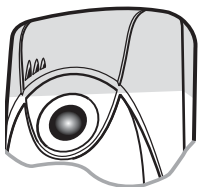



TIPS ON EFFICIENT OPERATION: Your phone has a built-in antenna (grey area in picture). As with any other radio transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimizes the antenna performance and the talktime of your phone.

If the phone requests a PIN code:

The PIN code is usually supplied with the SIM card.




Key in the code (displayed as ****) and press  **OK**.

If the phone requests a security code:






Key in the security code (displayed as *****) and press  **OK**.


The factory setting for the security code is **12345**. For more information on the access codes, see p. 55 in the User's Guide.


FIRST SETTINGS



Use the number keys  -  to key in first the current time and then the date. Press  **OK** to accept the settings.


Use the Scroll key

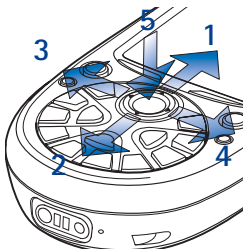
Press the scroll key on the top , bottom , left  and right  (shown with blue arrows 1 to 4) to move in the Menu. Scroll to an application or a folder and press the scroll key in the middle  (shown with blue arrow 5) to open it. For example:



- 1 To open an Options list, press  **Options**. The small arrow at the bottom of the display (1) indicates if the list contains more items. The lighter the arrow, the less items are left in the list.




- 2 To scroll down the Options list, press . A small arrow to the right (2) indicates a sublist. To open a sublist, press .

To start an action, scroll to a command and press .

- 3 Press  to go to a tab (3), a new page, or view in an application.






Make a call

- 1 In standby mode, key in the phone number, including the area code. If you make a mistake, press  to clear numbers.
- 2 Press  and wait for the answer.
- 3 Press  to finish the call (or to cancel the call attempt).

Copy names and numbers from a SIM card to the phone memory

If you have stored names and phone numbers on a SIM card, you can copy them to the phone memory.






- 1 Press  to open the main Menu.
- 2 Use the scroll key to move to **Contacts**.
- 3 Press  to open **Contacts**.
- 4 When you open **Contacts** for the first time, the phone asks you if you want to copy all your contact data from the SIM card to the phone memory. Press  **OK**.


See also "Copy contacts between the SIM card and phone memory" on page 63.


Keyguard

Use the keyguard (keypad lock) to prevent the keys from being accidentally pressed.








To lock: Press  and . When the keys are locked,  appears on the display.

To unlock: Press  and .








When the keyguard is on, to answer a call, press . During a call, the phone can be operated in the normal way.

Note: When Keyguard is on, calls may be possible to the emergency number programed into your phone (e.g. 911 or other official emergency number). Just key in the emergency number and press . The number is displayed only after you have keyed in its last digit.


Shortcuts in standby mode

- Press  to open the main Menu.
- Press  to open a list of the last dialed numbers. Press  to view received and missed calls lists.
- Press  to open **Contacts**.
- To change the profile, press  briefly and select the profile.
- Press  and  to call your voice mailbox. See "Call your voice mailbox" on page 30.

Shortcuts in editors


- Press  to open a list of commands related to writing and editing text. Press  to switch between predictive, traditional text input and number mode (*Dictionary* → *Dictionary on, Alpha mode, Number mode*).
- When you are writing, press  repeatedly to access different kinds of special characters, or press  to open a list of special characters.
- Press  to enter a space.
- You can also use  to mark items. Press and hold  and at the same time, move the PicKey to mark text to be copied or erased.


Other shortcuts



In the main Menu, press and hold  to open a view where you can see all the applications that are open and switch between them. See also p. 10 in the User's Guide.

Standby mode

The indicators described below are shown when the phone is ready for use, with no characters keyed in. In this state, the phone is in 'standby mode'.

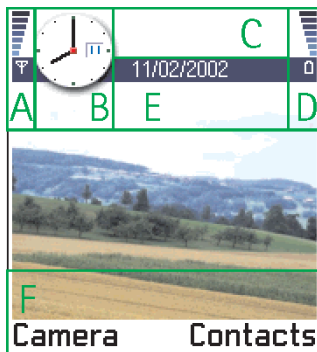- A Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal. The symbol is replaced with the GPRS symbol  when the *GPRS connection* has been set to *When available* and a connection is available in the network or in the current cell. See 'Packet data (General Packet Radio Service, GPRS)', p. 48 and 'GPRS', p. 54.







- B Shows an analog or a digital clock. Also see settings for 'Date and time', p. 55 and settings for Standby mode→ Background image, p. 45.
- C Indicates which cellular network the phone is currently using.
- D Shows the battery charge level. The higher the bar, the more power left in the battery.
- E Navigation bar: shows the currently active profile. If the selected profile is *General*, the current date is displayed instead of the profile name. For further information, see 'Navigation bar - moving horizontally', p. 24 and 'Profiles', p. 123.
- F Shows the current shortcuts assigned for the selection keys  and .


Note: Your phone has a screen saver. If there are no actions for five minutes, the display is cleared and a screen saver becomes visible. See p. 45. To deactivate the screen saver, press any key.


Tip: You can change the selection key shortcuts and the background image. See the settings for 'Standby mode', p. 45.


INDICATORS RELATED TO ACTIONS



One or more of the following icons may be shown when the phone is in standby mode:




-  - Indicates that you have received new messages to the Inbox in Messaging. If the indicator is blinking, the phone memory is low and you must delete some data. For further information, see 'Memory low', p.178.
-  - Indicates that you have received new e-mail.
-  - Indicates that you have received one or several voice messages. See 'Call your voice mailbox', p. 30.
-  - Indicates that there are messages waiting to be sent in Outbox. See p. 112.


 - Shown when *Incoming call alert* has been set to *Silent* and *Message alert tone* to *None* in the currently active profile. See 'Profiles', p. 123.

 - Indicates that the phone's keypad is locked.

 - Indicates that you have an active alarm. See 'Clock', p. 137.



 - Indicates that Bluetooth is active. Note that, when data is transmitted via Bluetooth,  is shown.



 - Indicates that all calls to the phone are forwarded. **NEED PIC** - Indicates that all calls to the phone are forwarded to a voice mailbox. See 'Settings for call forwarding', p. 34. If you have two phone lines, the forward indicator for the first line is  and for the second line . See 'Line in use (network service)', p. 46.


 - Indicates that you can make calls using phone line 2 only (network service). See 'Line in use (network service)', p. 46.


DATA CONNECTION INDICATORS


- When an application is establishing a data connection, one of the indicators below blinks in standby mode.
- When an indicator is shown continuously, the connection is active.

 for a data call,  for a high speed data call,

 is shown instead of the signal strength indicator when there is an active GPRS connection.  for when the GPRS connection is put on hold during voice calls.


 for a fax call,

 for a Bluetooth connection, and

 for an infrared connection.




• MENU






Press  (Menu key) to open the main Menu. In the Menu, you can access all the applications in your phone.

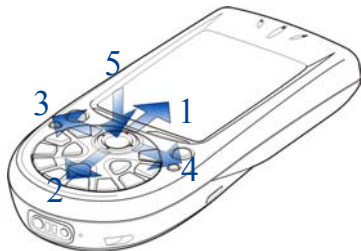
Options in the Menu are:


*Open, List view / Grid view,
Delete, Organize, Rename,
Help, and Exit.*



Using the scroll key to move

Moving in the Menu	Press the scroll key on the top  , bottom  , left  and right  (shown with blue arrows 1 to 4) to move in the Menu.
Opening applications or folders	Scroll to an application or a folder and press the scroll key in the middle  (shown with blue arrow 5) to open it.
Closing applications	Backstep by pressing Back as many times as is needed to return to standby mode or select Options → Exit .

If you press and hold , the phone returns to standby mode and the application is left open in the background.

Pressing  will always end a call, even if another application is active and displayed.


When you switch the phone off, applications are closed and any unsaved data is saved automatically.

Tip: Select **Options** → **List view** if you want to view the applications in a list.

Rearrange the Menu



You can rearrange the Menu in any order you like. You can move applications that you use more often from a folder to the Menu, and place applications you do not use as often in folders. You can also create new folders.

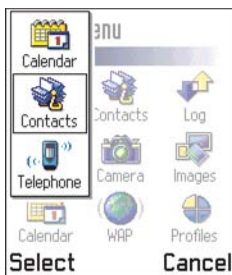- 1 Scroll to the item you want to move and select **Options** → **Organize** → **Move**. A check mark is placed beside the application.
- 2 Move the selection where you want the application to be and press **OK**.



New pic needed

Switch between applications


If you have several applications open and want to switch from one application to another: Press and hold  (Menu key). The application switching window opens showing a list of applications that are currently open. Scroll to an application and press  to go to it.

Note: If memory is getting low, the phone may close some applications. The phone saves any unsaved data before an application is closed.

• OPTIONS LISTS


In this user guide, you can see the Options list commands which tell you what commands are available in different views and situations. The available commands change depending on the view you are in. In some situations, when you press the scroll key, a shorter options list appears showing only the main commands available in the view.

Online help

Your Nokia 3650 als0 has a help function which you can access from any application or view showing the Options selection corresponding to the  key.



• NAVIGATION BAR – MOVING HORIZONTALLY

In the navigation bar, you can see:



- small arrows or tabs which tell you if there are more views, folders, or files you can move to.
- editing indicators, see 'Write text', p. 90.
- other information, for example, 2/14 in the figure below means that the current picture is the second of 14 pictures in the folder. Press  to see the next picture.




• ACTIONS COMMON TO ALL APPLICATIONS

- **Open items for viewing** – When you are viewing a list of files or folders, to open an item, scroll to an item and press the scroll key or select *Options* → *Open*.
- **Edit items** – To open an item for editing, you sometimes need to first open it for viewing and then select *Options* → *Edit*, if you want to change its contents.
- **Rename items** – To give a new name to a file or folder, scroll to it and select *Options* → *Rename*.
- **Remove, delete items** – Scroll to the item and select *Options* → *Delete* or press . To delete many items at a time, you first need to mark them. See the next paragraph: 'Marking an item'.
- **Mark an item** – There are several ways to select items when you are in a list.
 - To select one item at a time, scroll to it and select *Options* → *Mark/Unmark* → *Mark* or press  and the scroll key at the same time. A check mark is placed next to the item.
 - To select all items in the list, select *Options* → *Mark/Unmark* → *Mark all*.

Tip: For information on how to insert text and numbers, see "Write text" on page 90.

- **Mark multiple items** - Press and hold  and at the same time move the scroll key down or up. As the selection moves, a check mark is placed next to the items. To end the selection, stop the scrolling with the scroll key and then release .

After you have selected all the items you want, you can move or delete them by selecting **Options** → *Move to folder* or *Delete*.

- To unmark an item, scroll to it and select **Options** → *Mark/Unmark* → *Unmark* or press  and the scroll key at the same time.
- **Create folders** - To create a new folder, select **Options** → *New folder*. You are asked to give a name to the folder (max. 35 letters).
- **Move items to a folder** - To move items to a folder or between folders, select **Options** → *Move to folder* (not shown if there are no folders available). When you select *Move to folder*, a list of available folders opens and you can also see the root level of the application (for moving an item out of a folder). Select the location you want the item to be moved to and press **OK**.




Search for items





You can search for a name, file, folder, or shortcut by using the search field. In some situations the search field is not visible automatically, and you can activate it by selecting **Options** → *Find* or just by starting to key in letters.

1 To search for an item, start to key in text in the search field. The phone immediately starts to search for matches and moves the selection on the best match.

To make the search more accurate, key in more letters and the selection moves on the item that best matches the letters.

2 When the correct item is found, press  to open it.



• VOLUME CONTROL

When you have an active call or are listening to a sound, press  or  to increase or decrease the volume level, respectively.


Built-in loudspeaker

Your phone has a built-in high volume loudspeaker for handsfree use. To locate the loudspeaker, see the picture of the different keys and parts in the [Quick start guide](#). The loudspeaker allows you to speak and listen to the phone from a short distance without having to hold the phone to your ear, for example, having it on a table nearby. The loudspeaker can be used during a call, with sound applications, and when viewing multimedia messages. Video player uses the loudspeaker by default when you watch a video. Using the loudspeaker makes it easier to use other applications while in a call.

Voice volume icons:

-  - for earpiece mode,
-  - for loudspeaker mode.

ACTIVATE THE LOUDSPEAKER

To change to using the loudspeaker during an already active call, select [Options](#)→ [Activate handsfree](#). A tone is played,  is shown in the navigation bar, and the volume indicator changes.



Volume indicators for earpiece and loudspeaker modes are shown in the navigation bar.

The loudspeaker needs to be activated separately each time for phone calls, but the sound applications such as Composer and Recorder use the loudspeaker by default.



The loudspeaker cannot be activated when you have a headset connected to the phone.

TURN OFF THE LOUDSPEAKER

When you have an active call or a sound is playing, select **Options**→*Deactiv.handsfree*.

Note: In sound applications turning off the loudspeaker affects only one sound file at a time. When you open the next sound clip or ringing tone, the loudspeaker is used by default and needs to be turned off again.

Headset mode

To adjust the volume level when a headset is connected to your phone, press  or  or use the headset's keys.

Shared memory

The following features in your phone use shared memory: contacts, text, short messages, multimedia messages, images and ringing tones, **Video recorder and player**, calendar and to-do notes, and downloaded applications. Using any of these features leaves less memory for other features. This is especially true with heavy use of any of the features. For example, saving many images may take all of the shared memory and your phone may display that the memory is full. In this case, delete some of the information or entries reserving the shared memory.



2 Your phone

• MAKE A CALL

- 1 Key in the phone number, including the area code. Press or to move the cursor. Press to remove a number.

For international calls, press twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without 0, and the phone number.

Tip: To adjust the volume during a call, press to increase and to decrease the volume level.


Note: Calls described here as international may in some cases be made between regions of the same nation.

- 2 Press to call the number.
- 3 Press to end the call (or to cancel the call attempt).

Normal position: Hold the phone as you would hold any other telephone.

Note: Pressing will always end a call, even if another application is active and displayed on the display.

Make a call using the Contacts directory

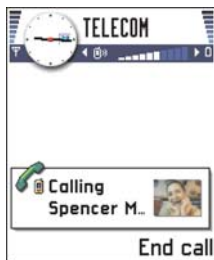

- 1 To open the Contacts directory, go to **Menu**→ **Contacts**.



2 To find a contact, scroll to the desired name, or key in the first letters of the name. The Search field opens automatically and matching contacts are listed.

- 3 Press to start the call.

If the contact has more than one phone number, scroll to the number and press to start the call.

Call your voice mailbox

The voice mailbox (network service) is an answering machine where callers who are unable to reach you can leave you voice messages.

- To call your voice mailbox, press  and  in standby mode.
- If the phone asks for the voice mailbox number, key it in and press **OK**. You can obtain this number from your service provider.

See also "Settings for call forwarding" on page 34.

Each phone line may have its own voice mailbox number, see "Line in use (network service)" on page 46.




Tip: If your voice mail requires you to enter a password every time you call to listen to your voice messages, you may want to add a DTMF number after the voice mailbox number. This way the password is given automatically every time you call your voice mail. For example, 1234567p1234# where 1234 is the password and 'p' inserts a pause.

CHANGE THE VOICE MAILBOX NUMBER

To change the phone number of your voice mailbox, go to **Menu**→**Tools**→**Voice mailbox** and select **Options**→**Change number**. Key in the number (obtained from your service provider) and press **OK**.


1-touch dialing

To view the 1-touch dialing grid, go to **Menu**→**Tools**→**1-touch dial**.

- 1 Assign a phone number to one of the 1-touch dialing keys ( - ) , see "Assign 1-touch dialing keys" on page 68.
- 2 To call the number: In standby mode, press the corresponding 1-touch dialing key and . If the *1-touch dialing* function is set to *On*: Press and hold the corresponding 1-touch dialing key until the call is started.


Make a conference call

Conference calling is a network service that allows you to make a conference call with a maximum of six participants, including yourself.



- 1 Make a call to the first participant.
- 2 To make a call to a new participant, select **Options**→*New call*. Key in or search the memory for the phone number of the participant and press **OK**. The first call is automatically put on hold.
- 3 When the new call has been answered, join the first participant in the conference call. Select **Options**→*Conference*.
- 4 To add a new person to the call, repeat step 2 and then select **Options**→ *Conference*→*Add to conference*.
 - To have a private conversation with one of the participants: Select **Options**→ *Conference*→*Private*. Scroll to the desired participant and press **Private**. The conference call is put on hold in your phone, and the other participants can still continue talking with each other while you have a private discussion with one participant only. Once you have finished the private conversation, select **Options**→*Add to conference* to return to the conference call.
 - To drop one participant from the conference call, select **Options**→ *Conference*→ *Drop participant*, then scroll to the participant and press **Drop**.
- 5 To end the active conference call, press .




A conference call with two participants is shown.

Tip: The quickest way to make a new call is to dial the number and press  to start the call. The existing call is automatically put on hold.

• ANSWER A CALL

- To answer an incoming call, press .
- To end the call, press .

If you do not want to answer a call, press . The caller will hear a "line busy" tone.

Tip: If you have activated the *Call forward* → *If busy* function to forward calls, for example, to your voice mailbox, rejecting an incoming call will also forward the call. See "Settings for call forwarding" on page 34.

When a call comes in, press **Mute** to quickly mute the ringing tone.

Tip: To adjust the phone tones for different environments and events, for example, when you want your phone to be silent, see "Profiles" on page 123.

Note: It is possible that the phone assigns a wrong name for the phone number. This happens if the phone number of the caller is not stored in Contacts but the seven last digits of the number match another number that is stored in Contacts. In this case, call identification is not correct.

Call waiting (network service)

If you have activated the Call waiting service, the network will notify you of a new incoming call while you have a call in progress. See "Call waiting: (network service)" on page 46.



(PIC) If you have activated the Call waiting service, the network will notify you of a new incoming call while you have a call in progress. See “Call waiting: (network service)” on page 46.

1 During a call, press  to answer the waiting call. The first call is put on hold.

To switch between the two calls, press **Swap**.

2 To end the active call, press .

Tip: To end both calls at the same time, select **Options**→**End all calls** and press **OK**.

Options during a call





Many options that you can use during a call are network services. Press **Options** during a call for some of the following options:

Mute or Unmute, End active call, End all calls, Hold or Unhold, Handset, BT handsfree, New call, Conference, Private, Drop participant, Answer, and Decline.

Swap is used to switch between the active call and the call on hold

Transfer is used to connect an incoming call or a call on hold with an active call and to disconnect yourself from both calls.

Send DTMF is used to send DTMF tone strings, for example, passwords or bank account numbers.

1 Key in the digits with  - . Each keystroke generates a DTMF tone, which is transmitted while the call is active. Press  repeatedly to produce: *, **p** (inserts a pause of approx. two seconds before, or between DTMF characters.), and **w** (if you use this character, the remaining sequence is not sent until you press **Send** again during the call). Press  to produce #.

2 To send the tone, press **OK**.

Tip: You can also store a sequence of DTMF tones for a contact card. When you make a call to the contact, you can retrieve the sequence. Add DTMF tones to the phone number or *DTMF* fields in a contact card.

Glossary: DTMF tones are the tones you hear when you press the number keys on the phone keypad. DTMF tones allow you to communicate with voice mailboxes and computerized telephony systems, for example.

Settings for call forwarding

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider.

Go to **Menu**→**Tools**→**Call forward**.

- Select one of the forward options, for example, select *If busy* to forward voice calls when your number is busy or when you decline incoming calls.
- Select **Options**→*Activate* to set the forward setting on, *Cancel* to set the forward setting off, or *Check status* to check whether the forward is activated or not.
- To cancel all active forwards, select **Options**→*Cancel all forwards*.

For information about the forward indicators, see "Indicators related to actions" on page 20.

Note: You cannot have rejection of incoming calls and call forwarding active at the same time. See "Call restriction (network service)" on page 59.



• LOG – CALL LOG AND GENERAL LOG

Go to **Menu**→ **Log**.

In the log you can monitor phone calls, short messages, packet data connections, and fax and data calls registered by the phone. You can filter the log to view just one type of event and create new contact cards based on the log information.

To view a list of sent messages, go to **Messaging** → **Sent**.




Note: Connections to your remote mailbox, multimedia messaging center, or browser pages are shown as data calls or packet data connections in the general communications log.

Recent calls log

Go to **Menu**→ **Log**→*Recent calls*


The phone registers the phone numbers of missed, received, and dialed calls, and the approximate duration and cost of your calls. The phone registers missed and received calls only if the network supports these functions, and the phone is switched on and within the network's service area.

Options in the Missed, Received, Dialed views are: *Call*, *Use number*, *Delete*, *Clear list*, *Add to Contacts*, *Help*, and *Exit*.

Icons	
	for missed calls
	for received calls
	for dialed numbers


Missed calls and received calls

To view a list of the last 20 phone numbers from which somebody has tried to call you without success (network service), go to **Log**→ *Recent calls*→ *Missed calls*.

When you see a note in standby mode about missed calls, press **Show** to access the list of missed calls. To call back, scroll to the number or name you want and press .


To view a list of the 20 numbers or names from which you have most recently accepted calls (network service), go to **Log**→ *Recent calls*→ *Received calls*.

Dialed numbers

Press  in standby mode to open the Dialed numbers view.

To view the 20 phone numbers that you have most recently called or attempted to call, go to **Log**→ *Recent calls*→ *Dialed nos.*


Erasing recent call lists

- To clear all recent call lists, select **Options**→ *Clear recent calls* in the Recent calls main view.
- To clear one of the call registers, open the **log** you want to erase and select **Options**→ *Clear list*.
- To clear an individual event, open a **log**, scroll to the event, and press .

Call duration

Go to **Menu**→ **Log**→ *Call duration*.

Allows you to view the duration of your incoming and outgoing calls. To see the call duration timer while you have an active call, select **Options**→ *Settings*→ *Show call duration*→ *Yes*.


Erasing call duration timers - Select **Options**→ *Clear timers*. For this you need the lock code, see "Security" on page 55. To clear an individual event, scroll to it and press .

Call costs (network service)

Go to **Log** → *Call costs*.

Call costs allows you to check the cost of the last call or all calls. The call costs are displayed separately for each SIM card.

The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding-off for billing, taxes and so forth.

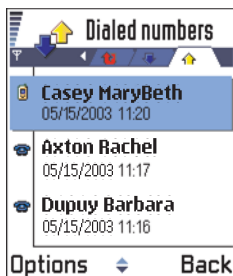

CALL COSTS LIMIT SET BY A SERVICE PROVIDER

Your service provider can limit the cost of your calls to a certain amount of charging units or units of currency. When the limited charging mode is active, calls can be made only as long as the preset credit limit (call cost limit) is not exceeded and you are in a network that supports call cost limit. The number of remaining units is shown during a call and in standby mode. When the charging units have expired, the note *Call cost limit reached* is displayed. Contact your service provider for information on the limited charging mode and charging unit prices.

Cost shown as charging units or currency

You can set the phone to show the remaining talk-time in charging units or units of currency. For this, you may need the PIN2 code, see "Security" on page 55.


- 1 Select **Options** → *Settings* → *Show costs in*. The options are *Currency* and *Units*.
- 2 If you choose *Currency*, a note requesting you to write the unit price is shown. Key in the cost of your home network charging or credit unit and press **OK**.
- 3 Write a name for the currency. Use a three-letter abbreviation, for example, USD.

Note: When no more charging units or currency units are left, calls may only be possible to the emergency number programed into your phone (e.g. 911 or other official emergency number).

SET A CALL COST LIMIT FOR YOURSELF

- 1 Select **Options** → *Settings* → *Call cost limit* → *On*.
- 2 The phone requests you to enter the limit in units. For this you may need the PIN2 code. Depending on the *Show costs in* setting, enter either the amount of charging units or currency.

When the charging limit you have set yourself is reached, the counter stops at its maximum value and the note *Reset all calls' cost counter* is displayed. To be able to make calls, go to **Options** → *Settings* → *Call cost limit* → *Off*. For this you need the PIN2 code, see "Security" on page 55.

Erase call cost counters – Select **Options** → *Clear counters*. For this you need the PIN2 code. To clear an individual event, scroll to it and press .

GPRS data counter

Go to **Log** → *GPRS counter*.

Allows you to check the amount of data sent and received during packet data (GPRS) connections. For example, you may be charged for your GPRS connections by the amount of data sent and received.

View the general log

Go to **Menu** → **Log** and press .

In the general log, for each communication event, you can see the sender or recipient name, phone number, name of the service provider, or access point.

Note: Sub-events, such as a short message sent in more than one part and packet data connections, are logged as one communication event.


Filter the log

- 1 Select **Options** → *Filter*. A list of filters opens.
- 2 Scroll to a filter and press **Select**.


Erase the contents of the log




To erase all the log contents, Recent calls **log**, and Messaging delivery reports permanently, select **Options** → *Clear log*.

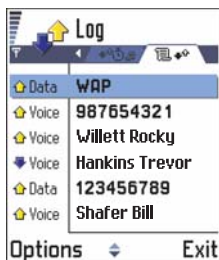Confirm by pressing **OK**.



Packet data counter and connection timer

To view how much data, measured in kilobytes, has been transferred and how long a certain GPRS connection has lasted, scroll to an Incoming or Outgoing event with the access point icon  and select **Options** → *View details*.

Icons	
	for incoming
	for outgoing
	for missed communication events

Log settings

Select **Options** → *Settings*. The list of settings opens.

- *Log duration* - The log events remain in the phone memory for a set number of days after which they are automatically erased to free memory.
If you select *No log*, all the log contents, Recent calls **log**, and Messaging delivery reports are permanently deleted.
- For *Call duration*, *Show costs in*, *Call cost limit*, see the sections 'Call duration' and 'Call costs (network service)' earlier in this chapter.



• SIM FOLDER

Go to **Menu**→ **SIM**.

Your SIM card may provide additional services that you can access in this folder. See also "Copy contacts between the SIM card and phone memory" on page 63, 'Confirm SIM service actions', p. 57, 'Fixed dialing', p. 56, and "View messages on a SIM card" on page 113.

Options in the SIM directory are: *Open*, *Call*, *New SIM contact*, *Edit*, *Delete*, *Copy to Contacts*, *My numbers*, *SIM details*, *Help*, and *Exit*.

Note: For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

In the SIM directory, you can see the names and numbers stored on the SIM card, you can add or edit them, and you can make calls.



• MEMORY CARD

Options in the memory card are: *Backup phone mem.*, *Restore from card*, *Format mem. card*, *Memory card name*, *Set password*, *Change password*, *Remove password*, *Unlock memory card*, *Mem. in use*, *Help* and *Exit*.


If you have a memory card you can use it to store your multimedia files like video clips and sound files, photos, messaging information, and to backup information from your phone's memory.

Important: Keep all memory cards out of the reach of small children.


Note: Details of how you can use the memory card with other features and applications of your Nokia 3650 are given in the sections describing these features and applications.


Insert the memory card

A

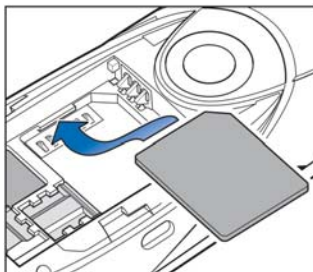


B

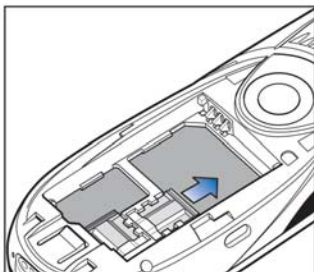

- 1 Make sure the phone is switched off. If it's on, press and hold  to switch off the phone.
- 2 With the back of the phone facing you, slide open the cover and remove the battery, see Quick start 'Insert the SIM card' for instructions on removing the cover.
- 3 Position the memory card in its slot.
Make sure that the gold contacts of the card are facing down.
- 4 Slide the silver catch over the memory card to secure it in its place.
- 5 When you have secured the card in place, replace the battery, then replace the cover by sliding it back into place.

Important: Do not remove the memory card in middle of an operation. Be sure to close all memory card applications before removing the card.

Important: If you are installing an application to the memory card and need to reboot the phone, do not remove the card until the reboot is complete. Otherwise the application files may be lost.

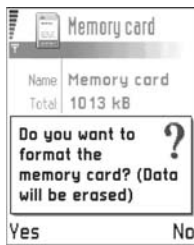

Format the memory card

You must format the memory card before you can use it for the first time.

Select [Options](#) → [Format mem. card](#).

You will be asked to confirm your request and once you confirm, formatting starts.

Back up and restore information

You can backup information from your phone's memory to the memory card. Select [Options](#) → [Backup phone mem.](#)

You can restore information from the memory card to the phone's memory. Select [Options](#) → [Restore from card](#).

Memory card password

You can set a password to protect your memory card against unauthorized use.

Note: The password is stored in your phone and you don't have to be enter it again while you are using the memory card on the same phone. If you want to use the memory card on another phone, you will be asked for the password.

SET UP, CHANGE, OR REMOVE YOUR PASSWORD

Select [Options](#) → [Set password](#), [Change password](#), or [Remove password](#).

YYYYYYYY

The password can be up to eight characters long.

Important: Once the password is removed, the memory card can be used on any phone without a password.

Check memory consumption

Using the [Mem. in use](#) option, you can check the memory consumption of different data groups and the available memory for installing new applications or software on your memory card.





Select [Options](#) → [Mem. in use](#).




3 Settings

• CHANGE GENERAL SETTINGS

Go to **Menu**→**Tools**→**Settings**.

- 1 Scroll to a setting group and press  to open it.
- 2 Scroll to a setting you want to change and press  to
 - switch between options if there are only two (**On/Off**).
 - open a list of options or an editor.
 - open a settings slider such as the Contrast setting. Press  or  to increase or decrease the value.

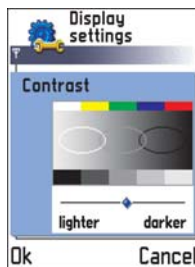



Note: You may be able to receive some settings from your service provider in a short message. See "Receiving smart messages" on page 104.


• PHONE SETTINGS



General

- *Phone language* - You can change the language for the display texts in your phone. This change will also affect the format used for date and time and the separators used, for example, in calculations. There are three languages installed in your phone. If you select *Automatic*, the phone selects the language according to the information on your SIM card. After you have changed the display text language, you must restart the phone.



Note: Changing the settings for *Phone language* or *Writing language* affects every application in your phone and the change remains effective until you change these settings again.


- *Writing language* - You can change the writing language of your phone permanently. Changing the language affects
 - the characters available when you press any key ( - ),
 - the predictive text dictionary used, and

Tip: You can also make this change in some of the editors. Press  and select *Writing language*:


- the special characters that are available when you press the  and  keys.



Example: You are using a phone where the display texts are in English but you want to write all your messages in French. After you change the language, the predictive text dictionary searches for words in French and the most common special characters or punctuation marks used in the French language are available when you press the  and  keys.



- *Dictionary* - To set the predictive text input *On* or *Off* for all editors in the phone. You can also change this setting when you are in an editor. Press  and select *Dictionary* → *Dictionary on* or *Off*.

Note: The predictive text dictionary is not available for all languages.

- *Welcome note or logo* - Press  to open the setting. The welcome note or logo is displayed briefly each time you switch on the phone. Select *Default* if you want to use the default image or animation. Select *Text* to write a welcome note (max. 50 letters). Select *Image* to select a photo or picture from *Images*.
- *Orig. phone settings* - You can reset some of the settings to their original values. To do this, you need the lock code. See p. 57. After resetting the settings, the phone may take a longer time to power on.

Note: All documents and files that you have created are left as they are.

Standby mode

- *Background image* - You can select any image to be used as a background image in standby mode. Select *Yes* to select an image from *Images*.
- *Left selection key* and *Right selection key* - You can change the shortcuts that appear over the left  and right  selection keys in standby mode. In addition to the applications, you can have the shortcut point to a function, for example, *New message*.

Note: You cannot have a shortcut to an application that you have installed.

Display

- *Contrast* - To change the contrast of the display to lighter or darker.
- *Color palette* - To change the color palette used on the display.
- *Screen saver timeout* - The screen saver is activated when the screen saver time-out period is over. When the screen saver is active, the display is cleared and you can see the screen saver bar.

To deactivate the screen saver press any key.

- *Screen saver* - Select what is shown on the screen saver bar: time and date or a text you have written yourself. The location and background color of the screen saver bar changes in one minute intervals. Also, the screen saver changes to indicate the number of new messages or missed calls.



• CALL SETTINGS

Note: To change the settings for call forwarding, go to *Menu*→*Tools*→*Call forward*. See "Settings for call forwarding" on page 35.


Send my caller ID

This network service allows you to set your phone number to be displayed (*Yes*) or hidden (*No*) from the person to whom you are calling. Or, the value may be set by your service provider when you make a subscription (*Set by network*).

Call waiting: (network service)

The network will notify you of a new incoming call while you have a call in progress. Select: *Activate* to request the network to activate call waiting, *Cancel* to request the network to deactivate call waiting, or *Check status*, to check if the function is active or not.



Automatic redial

When this setting is activated, your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt. Press  to stop automatic redialing.




Summary after call

Activate this setting if you want the phone to briefly display the duration and cost of the last call. To show costs, the *Call cost limit* needs to be activated for your SIM card. See p. 38.

Speed dialing

Select *On* and the numbers assigned to the speed dialing keys ( - ) can be dialed by pressing and holding the key. See also "Assigning speed dialing keys" on page 70.

Anykey answer


Select *On*, and you can answer an incoming call by briefly pressing any key, except , , and .

Line in use (network service)




This setting is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line (*Line 1* or *Line 2*) you want to use for making calls and sending short messages. Calls on both lines can be answered irrespective of the selected line.

Note: You will not be able to make calls if you select *Line 2* and have not subscribed to this network service.

To prevent line selection, select *Line change*→*Disable* if supported by your SIM card. To change this setting, you need the PIN2 code.

Tip: To switch between the phone lines, press and hold  in standby mode.

Voice message indicators:




, , or  is shown if you have one or several voice messages.

• CONNECTION SETTINGS

General information about data connections and access points

To define settings for access points, go to *Settings*→*Connection settings*→*Access points*.

A data connection is required to connect to an access point. Your phone supports three kinds of data connections:

- a GSM data call ()
- GSM high-speed data call (*), or
- packet data (GPRS) connection (.

There are three different kinds of access points that you can define: MMS access point, WAP access point, and Internet access point (IAP). Check with your service provider for the kind of access point needed for the service you wish to access. You need to set access point settings, if you want to, for example,

- send and receive multimedia messages,
- send and receive e-mail,
- browse WAP pages,
- use your phone as a modem.

See also "Data connection indicators" on page 23.



Glossary: Access point - The point where your phone connects to the Internet by way of a data call or packet data connection. An access point can be provided, for example, by a commercial Internet service provider (ISP), or WAP service provider.

GSM DATA CALLS

A GSM data call enables data transmission rates to a maximum of 14.4 kbps. For availability and subscription to data services, contact your service provider.

Minimum settings needed to make a data call

To insert a set of very basic GSM data call settings, go to *Settings*→*Connection settings*→*Access points* and select **Options**→*New access point*. Fill in the following: *Data bearer: GSM data, Dial-up number, Session mode: Permanent, Data call type: Analog, and Maximum data speed: Automatic.*

High speed data call (High Speed Circuit Switched Data, HSCSD)



Glossary: High-speed data enables data transmission rates to a maximum of 43.2 Kbps, which is four times faster than the standard data rates of the GSM network. HSCSD is comparable to the speed of many computer modems that communicate with today's fixed telephone networks.

For availability and subscription to high-speed data services, please contact your service provider.

Note: Sending data in HSCSD mode may drain the phone's battery faster than normal voice or data calls, as the phone may send data more frequently to the network.

Tip: The Settings wizard program included in the PC Suite for Nokia 3650 can help you to configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

PACKET DATA (GENERAL PACKET RADIO SERVICE, GPRS)



Glossary: Packet data, or General Packet Radio Service (GPRS), uses packet data technology where information is sent in short bursts of data over the mobile network. The benefit of sending data in packets is that the

network is occupied only when sending or receiving data. Because GPRS uses the network efficiently, it allows for quick data connection set up and fast data transmission speeds.

Minimum settings needed to make a packet data connection

- You need to subscribe to the GPRS service. For availability and subscription to GPRS, contact your service provider.
- Go to **Settings**→ *Connection settings*→ *Access points* and select **Options**→ *New access point*. Fill in the following: *Data bearer: GPRS* and *Access point name*: enter the name given to you by your service provider. See "Creating an access point" on page 51.

Pricing for packet data and applications

Both the active GPRS connection and the applications used over GPRS require a fee, for example, using WAP services, sending and receiving data, and short messages. For more detailed information on fees, contact your service provider. See also "Packet data counter and connection timer" on page 40.

Create an access point


Options in the Access points list are: *Edit*, *New access point*, *Delete*, *Help*, and *Exit*.

You may have preset access point settings in your Nokia 3650 mobile phone. Or, you may receive access point settings in a smart message from a service provider. See "Receiving smart messages" on page 104.

If there are no access points defined when you open *Access points*, you will be asked if you want to create a one.

If there already are access points defined, to create a new access point, select **Options**→ *New access point* and select:


- *Use default settings* to use the default settings. Make the needed

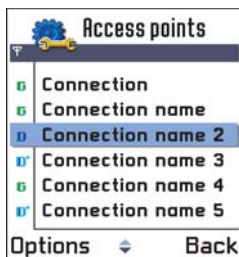

changes and press **Back** to save the settings.

- *Use existing settings* to use existing setting information as the basis for the new access point settings. A list of existing access points is opened. Select one and press **OK**. Access point settings are opened with some fields already filled.

Edit an access point

When you open Access points, the list of already available access points opens. Scroll to the access point you want to edit, and press .

Delete an access point

In the list of access points, scroll to the access point you want to remove and select **Options**→ *Delete*.

Access points

Options when editing access point settings are: *Change*, *Advanced settings*, *Help*, and *Exit*.

Here you can see a short explanation for every setting that may be needed for different data connections and access points.

Note: Start to fill in the settings from the top because depending on what data connection you select (*Data bearer*) or whether you need to insert a *Gateway IP address*, only certain setting fields are available.



Note: Follow the instructions given to you by your service provider very carefully.


- *Connection name* – Give a descriptive name for the connection.
- *Data bearer* – The options are *GSM data*, *High speed GSM*, and *GPRS*. Depending on what data connection you select, only certain setting fields are available. Fill in all fields marked with **Must be defined**. Other fields can be left empty, unless you have been instructed otherwise by your service provider.

Tip: See also "Settings needed for multimedia messaging" on page 97, "Settings needed for e-mail" on page 100, and "Set up the phone for the mobile browser" on page 140.

Note: To be able to use a data connection, the network service provider must support this feature, and if necessary, activate it for your SIM card.

- *Access point name* (for packet data only) - The access point name is needed to establish a connection to the GPRS network. You obtain the access point name from your service provider.
- *Dial-up number* (for GSM data and high speed data only) - The modem telephone number of the access point.
- *User name* - Write a user name if required by the service provider. The user name may be needed to make a data connection, and is usually provided by the service provider. The user name is often case-sensitive.

Tip: When you are writing, press  to open the special characters table. Press  to enter a space.

- *Prompt password* - If you must key in a new password every time you log on to a server, or if you do not want to save your password to the phone, choose *Yes*.
- *Password* - A password may be needed to make a data connection, and is usually provided by the service provider. The password is often case-sensitive. When you are writing the password, the characters you enter are shown briefly and then changed to asterisks (*). The easiest way to enter numbers is to press  and select *Insert number* and then continue entering letters.
- *Authentication* - *Normal* / *Secure*.
- *Gateway IP address* - The IP address that the required WAP gateway uses.
- *Homepage* - Depending on what you are setting up, either write
 - the WAP service address, or

- the address of the multimedia messaging center.



Glossary: ISDN connections are a way to establish a data call between your phone and your access point. ISDN connections are digital from end to end and as such offer quicker set-up times and faster data rates than analog connections. In order to use an ISDN connection, both your service provider and your Internet service provider must support it.

- *Connection security* - Choose whether Transport Layer Security (TLS) is used for the connection. Follow the instructions given to you by your service provider.
- *Session mode* - *Permanent* / *Temporary*.
- *Data call type* (for GSM data and high speed data only) - *Analog*, *ISDN v.110*, or *ISDN v.120* defines whether the phone uses an analog or digital connection. This setting depends on both your GSM service provider and Internet Service Provider (ISP), because some GSM networks do not support certain types of ISDN connections. For details, contact your ISP. If ISDN connections are available, they establish connections more quickly than analog methods.
- *Maximum data speed* (for GSM data and high speed data only) - The options are *Automatic* / *9600* / *14400* / *19200* / *28800* / *38400* / *43200*, depending on what you have chosen in *Session mode* and *Data call type*. This option allows you to limit the maximum connection speed when high speed data is used. Higher data rates may cost more, depending on the network service provider.

Note: The speeds above represent the maximum speed at which your connection will operate. During the connection, the operating speed may be less, depending on network conditions.



Glossary: DNS - Domain Name Service. An Internet service that translates domain names such as **www.nokia.com** into IP addresses like **192.100.124.195**.

Options→ Advanced settings

- *Phone IP address* - The IP address of your phone.
- *Primary name server*: - The IP address of the primary DNS server.

- *Second. name server*: - The IP address of the secondary DNS server.

Note: If you need to enter the *Phone IP address*, *Primary name server*, or *Second. name server*; contact your Internet service provider to obtain these addresses.

The following settings are shown if you have selected data call and high speed data as the connection type:

- *Use callback* - This option allows a server to call you back once you have made the initial call, so you have a connection without paying for the call. Contact your service provider to subscribe to this service.

Note: Charges may apply for certain types of received calls, such as roaming and high speed data calls. Contact your GSM service provider for more information.

Note: The phone expects the callback call to use the same data call settings that were used in the callback-requesting call. The network must support that type of call in both directions, to and from the phone.

- *Callback type* - The options are *Use server no.* / *Use other no.* Ask your service provider for the correct setting to use; it will depend on the service provider's configuration.
- *Callback number* - Key in your phone's data phone number which the dial back server uses. Usually, this number is the data call phone number of your phone.
- *Use PPP compression* - When set to *Yes*, this option speeds up the data transfer, if supported by the remote PPP server. If you have problems with establishing a connection, try setting this to *No*. Contact your service provider for guidance.



Glossary: PPP (Point-to-Point Protocol) - a common networking software protocol that enables any computer with a modem and a phone line to connect directly to the Internet.

- *Use login script* - The options are *Yes* / *No*.
- *Login script* - Insert the login script.

- *Modem initialization* (Modem initialization string)- Controls your phone using modem AT commands. If required, enter characters specified by your GSM network service provider or Internet service provider.

GPRS

Go to **Settings**→ *Connection settings*→ *GPRS*.

The GPRS settings affect all access points using a packet data connection.

GPRS connection- If you select *When available* and you are in a network that supports packet data, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select *When needed*, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.

Note: If there is no GPRS coverage and you have chosen *When available*, the phone will periodically try to establish a packet data connection.

Access point - The access point name is needed when you want to use your phone as a packet data modem to your computer. For more information on modem connections, see p. 121.

Data call

Go to **Settings**→ *Connection settings*→ *Data call*.

The Data call settings affect all access points using a data call and high speed data call.

Online time - If there are no actions the data call is dropped automatically after a time-out period. The options are *User defined*, in which case you enter a time, or *Unlimited*.

• DATE AND TIME

The date and time settings allow you to define the date and time used in your phone, as well as change the date and time format and separators. Choose *Clock type*→ *Analog* or *Digital* to change the clock shown in standby mode. Choose *Auto time update* if you want the mobile phone network to update time, date, and time zone information to your phone (network service).

Tip: For the *Auto time update* setting to take effect, the phone needs to be restarted.

• SECURITY

Phone and SIM

Explanations for the different security codes that may be needed:

- **PIN code (4 to 8 digits)** - The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the PIN code is blocked. If the PIN code is blocked, you need to unblock the PIN code before you can use the SIM card again. See the information about the PUK code.
- **PIN2 code (4 to 8 digits)** - The PIN2 code, supplied with some SIM cards, is required to access some functions, such as call cost counters.
- **Lock code (5 digits)** - The lock code can be used to lock the phone and keypad to avoid unauthorized use.

Note: The factory setting for the lock code is **12345**. To avoid unauthorized use of your phone, change the lock code. Keep the new code secret and in a safe place separate from your phone.


- **PUK and PUK2 codes (8 digits)** - The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code. If the codes are not supplied with the SIM card, contact the operator whose SIM card is in your phone for the codes.

You can change the following codes: lock code, PIN code, and PIN2 code. These codes can only include the numbers from **0** to **9**.

Note: Avoid using access codes similar to the emergency numbers, such as 911, to prevent accidental dialing of the emergency number.

PIN code request - When the PIN code request is active, the code is requested each time the phone is switched on. Note that deactivating the PIN code request may not be allowed by some SIM cards.

PIN code / PIN2 code / Lock code - Open this setting if you want to change the code.

Tip: To lock the phone manually, press . A list of commands opens. Select *Lock phone*.

Autolock period - You can set an autolock period, a time-out after which the phone is automatically locked and can be used only if the correct lock code is entered. Key in a number for the time-out in minutes or select *None* to turn off the autolock period.

To unlock the phone, key in the lock code.

Note: When the phone is locked, calls may be possible to the emergency number programed into your phone (e.g. 911 or other official emergency number).

Lock if SIM changed - Select *Yes* if you want the phone to ask for the lock code when an unknown, new SIM card is inserted into your phone. The phone maintains a list of SIM cards that are recognized as the owner's cards.

Fixed dialing - You can restrict your outgoing calls to selected phone numbers, if supported by your SIM card. You need the PIN2 code for this function. When this function is active, you can only call those phone numbers that are included in the fixed dialing list or which begin with the same digit(s) as a phone number on the list.

To view the list of Fixed dialing numbers, go to *Menu*→ *SIM*→ *Fixed dialing*.

Options in the Fixed dialing view are:

Open, Call, New contact, Edit, Delete, Add to Contacts, Add from Contacts, Help and *Exit*.

Note: When Fixed Dialing is set on, calls may be possible to certain emergency numbers in some networks (e.g. 911 or other official emergency number).


To add new numbers to the Fixed dialing list, select **Options**→ *New contact* or *Add from Contacts*.

Closed user group (network service) – You can specify a group of people to whom you can call and who can call you. For more information, contact your service provider. Select: *Default* to activate the default group agreed on with the service provider, *On* if you want to use another group (you need to know the group index number), or *Off*.

Note: When calls are limited to Closed User Groups, calls may be possible to certain emergency numbers in some networks (e.g. 911 or other official emergency number).

Confirm SIM services – To set the phone to display confirmation messages when you are using a SIM card service.

Certif. management

In the Certificate management main view, you can see a list of authority certificates that have been stored in your phone. Press  to see a list of user certificates, if available.

Options in the certificate management main view are:

Certificate details, Delete, Trust settings, Mark/Unmark, Help, and *Exit*.



Glossary: Digital certificates are used to verify the origin of WAP pages and installed software. However, they can only be trusted if the origin of the certificate is known to be authentic.

Digital certificates are needed if you:

- want to connect to an online bank or another site or remote server for actions that involve transferring confidential information, or

- want to minimize the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.



Glossary: Authority certificates are used by some WAP services, such as banking services, for checking signatures or server certificates or other authority certificates.

Important: Note, however, that even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.



Glossary: User certificates are issued to users by a Certifying Authority.

Viewing certificate details – checking authenticity

You can only be sure of the correct identity of a WAP gateway or a server when the signature and the period of validity of a WAP gateway or server certificate have been checked.

You will be notified on the phone's display

- if the identity of the WAP server or gateway is not authentic or
- if you do not have the correct security certificate in your phone.

To check certificate details, scroll to a certificate and select **Options**→ *Certificate details*. When you open certificate details, Certificate management checks the validity of the certificate and one of the following notes may appear:

- *Certificate not trusted* – You have not set any application to use the certificate. For more information, see the next section 'Changing the trust settings of an authority certificate'.
- *Expired certificate* – The period of validity has ended for the selected certificate.
- *Certificate not valid yet* – The period of validity has not yet begun for

the selected certificate.

- *Certificate corrupted* - The certificate cannot be used. Contact the certificate issuer.

Important: Certificates have a restricted lifetime. If *Expired certificate* or *Certificate not valid yet* is shown even if the certificate should be valid, check that the current date and time in your phone are correct.

Change the trust settings of an authority certificate

Scroll to an authority certificate and select **Options**→ *Trust settings*. Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

WAP services / *Yes* - the certificate is able to certify WAP sites.

Application manager / *Yes* - the certificate is able to certify the origin of new software.

Internet / *Yes* - the certificate is able to certify e-mail and imaging servers.

Important: Before changing these settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

• CALL RESTRICTION (NETWORK SERVICE)

Call restriction allows you to restrict the making and receiving of calls with your phone. For this function, you need the restriction password, which you can obtain from your service provider.

- 1 Scroll to one of the restriction options.
- 2 Select **Options**→ *Activate* to request the network to set call restriction on, *Cancel* to set the selected call restriction off, or *Check status* to check if the calls are restricted or not.
 - Select **Options**→ *Edit restriction passw.* to change the restriction password.
 - Select **Options**→ *Cancel all restrictions* to cancel all active call

restrictions.

Note: When calls are restricted, calls may be possible to certain emergency numbers in some networks (e.g. 911 or other official emergency number).

Note: Call restricting affects all calls, including data calls.

Note: You cannot have restriction of incoming calls and call forwarding or fixed dialing active at the same time. See "Settings for call forwarding" on page 35, or 'Fixed dialing', p. 37.

• NETWORK

Network selection

Choose *Automatic* to set the phone to automatically search for and select one of the cellular networks available in your area, or

Choose *Manual*, if you want to select the desired network manually from a list of networks. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone.



Glossary: Roaming agreement – An agreement between two or more network service providers to enable the users of one service provider to use the services of other service providers.

Cell info display

Select *On* to set the phone to indicate when it is used in a cellular network based on Micro Cellular Network (MCN) technology and to activate cell info reception.

• ACCESSORY SETTINGS

Scroll to an accessory folder and open the settings:

- Select *Default profile* to select the profile you want to be activated

each time when you connect a certain accessory to your phone. See "Profiles" on page 121.

- Select *Automatic answer* to set the phone to answer an incoming call automatically after five seconds time. If the Incoming call alert is set to *Beep once* or *Silent*, automatic answer cannot be in use.

Note: If you are using a loopset, you need to activate it separately. Open the Loopset folder and select *Use loopset* → *Yes*. If you have activated a loopset, the headset will use the same settings as the loopset.

Indicators shown in standby mode:



- a headset is connected.



- a loopset is connected.




4 Contacts

To open Contacts, press  in standby mode or go to **Menu**→ **Contacts**.

In Contacts, you can store and manage contact information, such as names, phone numbers, and addresses.

Contacts use shared memory. See “Shared memory” on page 27.

You can also add a personal ringing tone, voice tag, or a thumbnail image to a contact card. You can create contact groups, which allow you to send short messages or e-mail to many recipients at the same time.

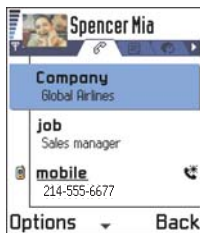

Glossary: Voice tags can be any spoken words, for example, a person's first name. Voice tags allow you to make phone calls simply by saying the word aloud.

• CREATE CONTACT CARDS

- 1 Open Contacts and select **Options**→ *New contact*. An empty contact card opens.
- 2 Fill in the fields you want and press **Done**. The contact card is saved and closed, after which you can see it in the Contacts directory.

• COPY CONTACTS BETWEEN THE SIM CARD AND PHONE MEMORY

- To copy names and numbers from a SIM card to your phone, go to **Menu**→ **SIM**→ **SIM directory**. Select the name(s) you want to copy and select **Options**→ *Copy to Contacts*.


- If you want to copy a phone, fax, or pager number from Contacts to your SIM card, go to Contacts, open a contact card, scroll to the number, and select **Options**→ *Copy to SIM direct*.

• EDIT CONTACT CARDS

Options in the Contacts directory are: *Open, Call, Create message, New contact, Edit, Delete, Duplicate, Add to group, Belongs to groups, Mark/Unmark, Send business card, Contacts info, Help*, and *Exit*.

Options when editing a contact card are:

Add thumbnail | Remove thumbnail, Add detail, Delete detail, Edit label, Help, and *Exit*.



- 1 In the Contacts directory, scroll to the contact card you want to edit and press  to open it.
- 2 To change the information on the card, select **Options**→ *Edit*.
- 3 To save your changes and to return to the contact card view, press **Done**.

Delete contact cards

In the Contacts directory, scroll to the contact card you want to delete and select **Options**→ *Delete*.

To delete many contact cards

- 1 Mark the cards to be deleted. Scroll to a contact you want to delete and select **Options**→ *Mark*. A check mark is placed besides the contact card.
- 2 When you have marked all the contacts you want to delete, select **Options**→ *Delete*.



Tip: You can also mark many items if you press and hold  and simultaneously press . See also "Actions common to all applications" on page 24.

Add and remove contact card fields




- 1 Open a contact card and select **Options**→ *Edit*.
- 2 To add an extra field, select **Options**→ *Add detail*.
To delete a field you do not need, select **Options** → *Delete detail*.
To rename a contact card field label, select **Options**→ *Edit label*.

Insert a picture to a contact card

There are two different types of pictures you can add to a contact card. See "Camera and Images" on page 73 for more information on how to take and store pictures.

- To attach a small thumbnail image to a contact card, open a contact card, select **Options**→ *Edit* and then select **Options**→ *Add thumbnail*. The thumbnail image is also shown when the contact is calling you.
- To add an image to a contact card, open a contact card, and press  to open the image view (). To attach an image, select **Options**→ *Add image*.

• OPTIONS WHEN VIEWING A CONTACT CARD

Contact information view () shows all information inserted in the contact card. Press  to open the Image view (.

Note: Only fields that have information are displayed in the contact information view. Select **Options**→ *Edit* if you want to see all fields and add more data to the contact.

Options when viewing a contact card, some are shown only when the selection is on a phone number are: *Call*, *Create message*, *Edit*, *Delete*, *Defaults*, *Add voice tag* / *Voice tags*, *Assign 1-touch dial* / *Remove 1-touch dial*, *Ringing tone*, *Copy to SIM direct*, *Send business card*, *Help*, and *Exit*.

Assign default numbers and addresses

If a contact has several phone numbers or e-mail addresses, to speed up calling and sending messages, you can define certain numbers and addresses to be used as the default.

Open a contact card and select **Options** → *Defaults*. A pop-up window opens, listing the different options.



Example: Scroll to *Phone number* and press **Assign**. A list of phone numbers in the selected contact card is shown. Scroll to the one you want to have as the default and press . When you return back to the contact card view, you can see the default number underlined.

Voice dialing

You can make a phone call by saying a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice dialing, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.




Example: You can use a person's name for a voice tag, for example, 'John's mobile'.


Note: You must say the name exactly as you said it when you recorded it. This may be difficult in, for example, a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

ADD A VOICE TAG TO A PHONE NUMBER

Note: Voice tags can only be added to phone numbers stored in the phone's memory. See "Copy contacts between the SIM card and phone memory" on page 63.

- 1 In the Contacts directory, scroll to the contact to which you want to add a voice tag and press  to open the contact card.
- 2 Scroll to the number to which you want to add the voice tag and select **Options**→ *Add voice tag*.

Note: You can have only one voice tag per contact card.


- 3 The text *Press Start, then speak after tone* is displayed.
When recording, hold the phone at a short distance away from your mouth. After the starting tone, say clearly the word(s) you want to record as a voice tag.
 - Press **Start** to record a voice tag. The phone sounds a starting tone and the note *Speak now* is displayed.
 - Press **Quit** to return to the contact card. After the starting tone, say clearly the word(s) you want to record as a voice tag.
- 4 After recording, the phone plays the recorded tag and the note *Playing voice tag* is displayed. If you do not want to save the recording, press **Quit**.
- 5 When the voice tag has been successfully saved, the note *Voice tag saved* is displayed and a beep sounds. A symbol  can be seen next to the number in the contact card.

Note: Your phone may have 30 phone numbers to which voice tags are attached. If the memory becomes full, delete some of the voice tags.

Tip: To view a list of voice tags you have defined, select **Options**→ *Contacts info*→ *Voice tags* in the Contacts directory.

MAKE A CALL BY SAYING A VOICE TAG

Note: You must say the voice tag exactly as you said it when you recorded it.


- 1 In standby mode, press and hold . A short tone is played and the note *Speak now* is displayed.
- 2 When you are making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from you mouth and face and say the voice tag clearly.

- 3 The phone plays the original voice tag, displays the name and number, and after 1.5 seconds dials the number of the recognized voice tag.

If the phone plays the wrong voice tag or to retry voice dialing, press **Retry**.

Note: When an application using a data call or GPRS connection is sending or receiving data, you cannot make a call by using voice dialing. To make a call by using a voice tag, end all active data connections.

REPLAY, ERASE, OR CHANGE A VOICE TAG

To replay, erase, or change a voice tag, open a contact card and scroll to the number that has a voice tag (indicated by ) and select


Options→ *Voice tags*→ then either

- *Playback* - to listen to the voice tag again, or
 - *Delete* - to erase the voice tag, or
 - *Change* - to record a new voice tag instead of the old one.
- Press **Start** to record.

Assign 1-touch dialing keys

1-touch dialing is a quick way to call frequently used numbers. You can assign 1-touch dialing keys to eight phone numbers. Number **1** is reserved for the voice mailbox.


- 1 Open the contact card for which you want a 1-touch dialing key and select **Options**→ *Assign 1-touch dial*. The 1-touch dialing grid opens, showing you the numbers from 1-9.
- 2 Scroll to a number and press **Assign**. When you return to the contact information view, you can see the 1-touch dial icon next to the number.

To call the contact by 1-touch dialing, go to standby mode and press the 1-touch dialing key and .



Add a ringing tone for a contact card or group


You can set a ringing tone for each contact card and group. When that contact or group member calls you, the phone plays the chosen ringing tone (if the caller's telephone number is sent with the call and your phone recognizes it).

- 1 Press  to open a contact card or go to the Groups list and select a contact group.
- 2 Select **Options**→ *Ringing tone*. A list of ringing tones opens.
- 3 Use the scroll key to select the ringing tone you wish to use for the contact or group and press **Select**.

To remove the ringing tone, select *No personal tone* from the list of ringing tones.

Note: For an individual contact, the phone will always use the ringing tone that was assigned last. So, if you first change a group ringing tone and then the ringing tone of a single contact that belongs to that group, the ringing tone of the single contact will be used when the contact calls you the next time.

Tip: To listen to a ringing tone, go to Recorder.

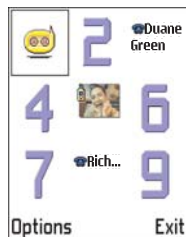

Send contact information

- 1 In the Contacts directory, scroll to the card you want to send.
- 2 Select **Options**→ *Send business card* then select the method, the choices are: *Via short message*, *Via e-mail* (available only if the correct e-mail settings are in place), *via Infrared*, or *via Bluetooth*. The contact card you want to send has now become a 'business card'. For further information, see the 'Messaging' chapter, "Send and receive data via infrared" on page 162, and "Send data via Bluetooth" on page 157.

You can add received business cards to your Contacts directory. See "Receive smart messages" on page 104 for further information.



Glossary: When you send or receive contact information, the term 'business card' is used. A business card is a contact card in a format suitable to be sent in a short message, usually in 'vCard' format.


• MANAGE CONTACT GROUPS

Options in the Groups list view are:


Open, New group, Delete, Rename, Ringing tone, Contacts info, Help, and Exit.

You can create contact groups, which can, for example, be used as distribution lists for sending short messages and e-mail. See also p. "Add a ringing tone for a contact card or group" on page 69.

Create contact groups


- 1 In the Contacts directory, press  to open the Groups list.
- 2 Select **Options**→ *New group*.
- 3 Write a name for the group or use the default name *Group xxx* and press OK.

Add members to a group


- 1 In the Contacts directory, scroll to the contact you want to add to a group and select **Options**→ *Add to group*. A list of available groups opens.
- 2 Scroll to the group to which you want to add the contact and press .



ADD MULTIPLE MEMBERS AT A TIME

- 1 In the Groups list, open a group and select **Options**→ *Add members*.
- 2 Scroll to a contact and press  to mark it. Repeat this action on all the contacts you want to add and press **OK** to add them to the selected group.


Remove members from a group

- 1 Go to the Groups list, scroll to the group you want to modify, and press .
- 2 Scroll to the contact you want to remove and select **Options**→
Remove from group.
- 3 Press **Yes** to remove the contact from the group.



5 Camera and Images

With the camera you can take pictures of people or events while on the move. The pictures are automatically saved in the Images application, where you can rename them and organize them in folders. You can also send photos to your friends in a multimedia message, as an e-mail attachment, or via a Bluetooth or infrared connection. The camera produces JPEG pictures.

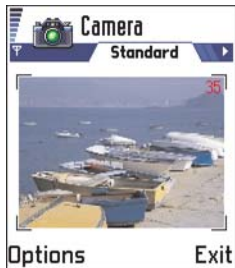

Press **Camera** in standby mode or go to **Menu**→ **Camera**.

Options before taking a picture are: *Capture*, *Go to Images*, *Settings*, *Help*, and *Exit*.



Glossary: JPEG is a standardized image compression format. JPEG files can be viewed with the most common image viewers, image editors, and Internet browsers. You can recognize these files by their JPG extension.


• TAKE PICTURES

Important: Obey all local laws governing the taking of pictures. Do not use this feature illegally.

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.


- 1 Press **Camera** in standby mode. The Camera application opens and you can see the view to be captured.

You can see the viewfinder and the cropping lines, which show you the image area to be captured. You can also see the image counter, which shows you how many images, depending on the selected image quality, fit in the memory of your phone.


2 To take a picture, press .

Note: Do not move the phone before the Camera application starts to save the photo. The photos are saved automatically in the Images application.

After the image has been saved:

- If you do not want to save the photo in the Images select **Options**→ *Delete*.
- To return to the viewfinder to take a new picture, press .

Options after a picture has been taken are: *New image*, *Send*, *Rename image*, *Go to Images*, *Settings*, *Help*, and *Exit*.

Note: The Camera goes into battery saving mode within a minute if there have been no key presses. To continue taking pictures, press .

Settings

In the Camera application settings, you can adjust the image quality setting and change the default image name.





Example: If you set 'Beach' as the default image name, Camera will name all the pictures you take 'Beach', 'Beach(01)', 'Beach(02)', and so on, until you change the setting again.

- 1 Select **Options**→ *Settings*.
- 2 Scroll to the setting you want to change:
 - *Image quality* - *High*, *Normal*, and *Basic*. The better the image quality, the more memory the image consumes. See also "Images and memory consumption" on page 76.
 - *Default image name* - By default, Camera names photos in the format '*Image.jpg*'. *Default image name* allows you to set a name for the pictures taken.
 - *Memory in use* - Select whether you want to store your images in the phone memory or the memory card, if you use one.

CAMERA MODE AFFECTS IMAGE SIZE AND ORIENTATION

Tip: Try out the different Camera modes to see how they affect the picture taken.

With the different Camera modes, you can affect the size and orientation of the picture to be taken. When you are taking a picture, press  or  to change between the different modes. Choose:

- *Standard* when you want to take normal landscape pictures,
- *Portrait* when you want to take a smaller icon-sized, vertical picture, which can be added to a contact card, or
- *Night* when the lighting is dim and the Camera needs a longer exposure time for the picture to be of good quality. Note that, in dim conditions, any movement while taking a picture may cause it to get blurred. The image size and orientation is the same for *Standard* and *Night*.



Standard, Portrait, and Night modes

- When you are taking a picture in Standard or Night mode, the viewfinder resolution is 160x120 pixels and 80x96 for Portrait mode.
- The images taken in Standard or Night mode are saved in 640x480 pixel (VGA) format and those taken in Portrait mode are saved in 80x96 pixel format.
- When you are viewing images, they are scaled to fit the display, which

has 176x208 pixels. This means that Standard and Night mode pictures will appear more detailed when viewed on a higher resolution screen, for example, a computer or when zoomed in Images.



Glossary: Resolution - A measure for the sharpness and clarity of an image. Resolution refers to the number of dots (pixels) in an image or a display. The more pixels there are, the more detailed the picture is. Resolution is usually measured in pixels, for example, 640x480=300 kilopixels (kpix)=0.3 megapixels (Mpix). **Glossary:** Resolution - A measure for the sharpness and clarity of an image. Resolution refers to the number of dots (pixels) in an image or a display. The more pixels there are, the more detailed the picture is. Resolution is usually measured in pixels, for example, 640x480=300 kilopixels (kpix)=0.3 megapixels (Mpix).

IMAGES AND MEMORY CONSUMPTION

Your phone has 4 MB (megabytes) of free memory for images, contact information, calendar, messages, and so on. See "Shared memory" on page 27. Portrait images (always taken in High quality) are so small that they take up very little memory. Images taken using the High quality setting and those taken in Night mode take up the most memory.

If 1 MB of memory is used for images only, it would fit approximately 40 Normal quality images taken in Standard mode. In the table below, you can see approximately how many images would fit in 1 Mb of memory.

Image quality Image type	Basic	Normal	High
Standard	55	40	30
Night	28	18	16
Portrait	-	-	>200

Tip: By using a memory card with your phone you can increase the number of images you can store.



• IMAGES – STORE PICTURES

Images allows you to view, organize, delete, and send photos and pictures stored in your phone. In Images you can organize images:

- taken with the camera,
- sent to your Inbox in a multimedia or a picture message, as an e-mail attachment, via an infrared or Bluetooth connection. After receiving the image in Inbox, you need to save it in Images.

In the Images main view, you can see a list of photos and folders. The list shows:

- the date and time a photo or an image was taken or saved,
- a small thumbnail picture, a preview of the image, and
- the number of images inside a folder, and
- a tab showing whether the photos or folders are located in the phone's memory or the memory card, if you use one.

Go to **Menu**→ **Images**.






Options in Images are: *Open, Send, Image uploader, Delete, Move to folder, New folder, Mark/Unmark, Rename, Receive via infrared* (only from a digital camera that supports the IrTran-P protocol, otherwise use the Infrared application, see p. 162), *View details, Add to Favorites, Help, and Exit*.



Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



View images

Note: When you open **Images** and you use a memory card, the starting tab is determined by which memory is selected as the *Memory in use*.

- 1 Press  or  to move from one memory tab to another.
- 2 To browse the images, press  and .
- 3 Press , to open an image. When the image is open, you can see the name of the image and the number of images in the folder on the top of the display.

When you are viewing an image, pressing  or  takes you to the next or previous picture in the current folder.

You can view animated GIF files in the same way as other images. Animations are played only once. When an animation stops, you will see a fixed image. To view the animation again, you must close it and then reopen it.

Options when viewing an image are: *Send, Rotate, Zoom in, Zoom out, Full screen, Delete, Rename, View details, Add to Favorites, Help, and Exit.*

ZOOMING


- 1 Select **Options**→ *Zoom in* or *Zoom out*. You can see the zooming ratio at the top of the display. See also section 'Keyboard shortcuts' later in this chapter.
- 2 Press **Back** to return to the initial view.

Note: The zoom ratio is not stored permanently.

Note: You cannot zoom in on GIF animations while they are playing.



Full screen

When you select **Options**→ *Full screen*, the panes around the picture are removed so that you can see more of the image. Press  to go back to the initial view.

Moving the focus

When you are zooming or viewing an image in full screen mode, use the scroll key to move the focus to the left, right, up, or down, so that you can take a closer look at one part of the picture, for example, its upper right corner.

Rotating

Select **Options**→ *Rotate*→ *Left* or to rotate an image 90 degrees counterclockwise or *Right* to rotate the image clockwise. The rotation status is not stored permanently.

KEYBOARD SHORTCUTS










- Rotate:  - counterclockwise,  - clockwise
- Scroll:  - up,  - down,  - left,  - right.
-  - zoom in,  - zoom out, press and hold to return to the normal view.
-  - change between full screen and normal view.

IMAGE DETAILS VIEW

To view the detailed information about an image, scroll to the image and select **Options**→ *View details*. A list of image information appears:

Format - *JPEG, GIF, PNG, TIFF, MBM, BMP, WBMP, OTA, WMF, Unsupported, or Unknown.*

Date and *Time* - when the image was created or saved, **n x n**- the size of the image in pixels, see the glossary explanation, p. 76.


Resolutn. - the size of the image in pixels. See the glossary explanation, page 76.

Size - in bytes or kilobytes (kB),

Color - *True color, 65536 colors, 4096 colors, 256 colors, 16 colors, Greyscale, or Black/white.*

Arrange images and folders


- To remove an image or folder, scroll to it and select **Options**→ *Delete*.

- To rename an image or a folder, scroll to the image or folder you want to rename and select **Options**→ *Rename*. Write the new name and press .

See "Actions common to all applications" on page 24 for further information on how to create folders and mark and move items to folders.

Send images

You can send photos or images via different messaging services.

- 1 Scroll to the image you want to send and select **Options**→ *Send*.
- 2 Then select the method, the choices are *Via multimedia*, *Via e-mail*, *Via infrared*, and *Via Bluetooth*.
 - If you select to send the image in an e-mail or a multimedia message, an editor opens. Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the *To:* field. Add text or sound and select **Options**→ *Send*. For more information, see "Create and send new messages" on page 94.
 - If you want to send the image via infrared or Bluetooth, see "Send data via Bluetooth" on page 157, and "Send and receive data via infrared" on page 162 for more information.





SEND IMAGES TO CLUB NOKIA PHOTO ZONE

To share your images and free up memory in the phone, you can send images or image folders to Club Nokia Photo Zone (www.club.nokia.com). In the Club Nokia Photo Zone, you can store your images, organize arrange them in albums, and give access rights to others to go and look at your images, manipulate the images, and send them to your friends.

Note: To be able to send images to Club Nokia Photo Zone, you need to join Club Nokia and have a valid user name and password. For more information, visit Club Nokia web pages (www.club.nokia.com) and set up a Photo Zone account.

Note: Only images in JPEG format can be sent to Club Nokia.

- 1 To send an image or a folder to Photo Zone, scroll to the image or folder and select **Options**→ *Image uploader*→ *Upload*. If After the correct settings are in place, the data connection and the image sending is started. Folders you have sent appear as new albums at Photo Zone.
- 2 To end the connection, press **Cancel**.
 - In case *Auto folder naming* is set to *Off*, select *New folder* to create a new folder and enter a folder name, or select one of the previously created folders.

Tip: You can send several images at a time via infrared or Bluetooth. To send several images at a time you need to mark them first. To mark several images at a time use the **Options Mark/Unmark** commands or press and hold  and at the same time press  or . As the selection moves, a check mark is placed next to the images. To end the selection, stop the scroll key and then release .

SETTINGS FOR SENDING IMAGES TO CLUB NOKIA PHOTO ZONE

In case you do not have the needed settings, you are asked to enter:

- *Image server name* – Give a descriptive name for the server, for example, Photo Zone.
- *Access point in use (Must be defined)* – Select an access point. Access point are defined in **Settings**→ *Connection settings*→ *Access points*. See p. 47 for further information.
- *User name* and *Password* – To be able to send images to Club Nokia Photo Zone, you need to join Club Nokia and have a valid user name and password. Visit Club Nokia web pages (www.club.nokia.com).
- *URL address (Must be defined)* – Enter the address of the Club Nokia Photo Zone: <http://www.club.nokia.com/>
- *Auto folder naming* – Choose *On* if you want the folders to be named automatically according to the current date and time.



Picture messages folder

Options in the Picture messages folder are: *Open*, *Send*, *Delete*, *Mark/Unmark*, *Rename*, *View details*, *Help*, and *Exit*.

In the Picture messages folder, you can find graphics sent to you in picture messages.

If you want to save a graphic you have received in a picture message, go to **Messaging** → *Inbox*, open the message, and select **Options** → *Save picture*.

VIEWING PICTURES

- 1 Scroll to the picture you want to view and press . The picture opens. Press  to view the next picture in the folder.
- 2 Press **Back** to return to the Pictures main view.



6 Video player

Go to [Menu](#)→ [Video](#)

With Video player you can view video clips stored in the phone's memory or on a memory card. Video player supports .3GP (3GPP) and .NIM (Nokia Interleaved Multimedia) video file formats.



Glossary: 3GPP file format (.3GP) is the standard video file format for Multimedia Messaging.

Video player can be launched by other applications on your phone, for example, from e-mail or Favorites.



• VIDEO CLIPS

You can watch a video clip from the video clip list. Video clip list is shown when you start your Video player.






To watch a video clip, scroll to it and select [Options](#)→[Open](#).



Glossary: Video clips are video files saved in your phone's memory or memory card.

Options in video clip view of Video player are: [Open](#), [Delete](#), [Edit clip name](#), [Move to phone mem](#) / [Move to mem. card](#), [Send](#), [Settings](#), [Add to Favorites](#), [Help](#) and [Exit](#).

Volume control

- To increase the volume press .
- To decrease the volume press .
- To mute the sound press  and hold until you see the lowest volume setting. Then press  again and the  indicator is

displayed.

- To turn on the sound press  and hold until you see the  indicator.



Options while playing a video clip are: *Pause*, *Stop*.


Send video clips

You can send video clips by using the *Send* option from your video clip list.

- 1 Scroll to the video clip you want send and select **Options**→*Send*.
- 2 Select one of the four ways you have of sending your video clip, via *Via infrared*, *Via Bluetooth*, *Via multimedia* or *Via e-mail*.

Note: You cannot send .NIM files using the *Via multimedia* option.

Store your videos

Tip: You can see where the video clip is stored. If you see the  icon next to the video clip name, the video clip is on the memory card.

If you have a memory card, you can store or move your collection of video clips to it. To move video clips from your phone's memory to the memory card:

- Scroll to the video clip you want to move and select **Options**→*Move to mem. card*.

You can also move your video clips to a PC using:


- the *Send* option from your video clip list, or

- a memory card, or
- PC Connect via Infrared or Bluetooth.

Options in stopped mode are: *Video clip list*, *Play*, *Save screen shot*, *Video details*, *Send*, *Add to Favorites*, *Video settings*, *Help*, and *Exit*.

Save a still image from a video

You can send a still image like any other image that you have saved on your phone. To save a still image at any time while the video is playing:

- 1 Press 
- 2 Select *Save screen shot*
- 3 Save the image file


For information about "Send images" on page 80.

Change the settings

In *Pause* you can change the settings for sound, contrast and loop.



Glossary: Loop setting gives you the option to automatically restart a video clip once it has finished.

Scroll to a setting you want to change and press  to

- switch between options (**On/Off**) for sound and loop, or
- open the slider view for changing the contrast value, and press **OK** to confirm the change and to return to the list of settings.

Note: At this time, you can only adjust the contrast of the video player and not the contrast settings of the phone.



7 Messaging

Note: Your phone must be switched on to use the functions in the **Messaging** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu**→ **Messaging**

Options in the Messaging main view: *Create message*, *Connect* (shown if you have defined settings for the mailbox), or *Disconnect* (shown if there is an active connection to mailbox), *SIM messages*, *Cell broadcast*, *Service command*, *Settings*, *Help*, and *Exit*.


In Messaging you can create, send, receive, view, edit, and organize:


- short messages,
- multimedia messages,
- e-mail messages
- smart messages, special short messages containing data, and
- instant messages.

In addition to these, you can receive messages and data via an infrared or Bluetooth connection, receive WAP service messages, cell broadcast messages as well as send service commands.



Short and multimedia messages use shared memory. See "Shared memory" on page 27.

When you open Messaging, you can see the *Create message* function and a list of default folders:

 **Inbox** – contains received messages except e-mail and cell broadcast messages. E-mail messages are stored in the *Mailbox*. You can read cell broadcast messages by selecting **Options**→ *Cell broadcast*.

 **My folders** – for organizing your messages into folders.

Tip: Organize your messages by adding new folders under My folders.

Tip: When you have opened one of the default folders, for example, **Sent**, you can easily move between the folders: by pressing  to open the next folder (**Outbox**), or by pressing  to open the previous folder (**Drafts**).



Mailbox - When you open this folder, you can either connect to your remote mailbox to retrieve your new e-mail messages or view your previously retrieved e-mail messages offline. See p. 74 for further information on online and offline modes. After you have defined settings for a new mailbox, the name given to that mailbox will replace *Mailbox* in the main view. See 'Settings for e-mail', p. 83.



Drafts - stores draft messages that have not been sent.



Outbox - is a temporary storage place for messages waiting to be sent.



Sent - stores the last 15 messages that have been sent. To change the number of messages to be saved, see 'General settings for the Messaging application', p. 86.



Reports- you can request the network to send you a delivery report of the short messages, smart messages, and multimedia messages you have sent. To turn on delivery report reception, select **Options**→ *Settings*→ *Short message* or *Multimedia message*, scroll to *Receive report*, and select *Yes*.

Note: Receiving a delivery report of a multimedia message that has been sent to an e-mail address might not be possible.

Note: Before you can create a multimedia message, write an e-mail, or connect to your remote mailbox, you must have the correct connection settings in place. See 'Settings needed for e-mail', p. 68 and 'Settings needed for multimedia messaging', p. 65.


• **MESSAGING – GENERAL INFORMATION**


The message status is always either draft, sent, or received. Messages can be saved to the Drafts folder before they are sent. Messages are temporarily placed to Outbox to wait for sending. After a message has

been sent, you can find a copy of the message in the Sent folder. Received and sent messages are in read-only state until you select *Reply* or *Forward*, which copies the message to an editor. Note that you cannot forward e-mail messages you yourself have sent.

Note: Messages or data that have been sent via an infrared or Bluetooth connection are not saved in the Draft or Sent folders.




Open a received message


When you receive a message,  and the note *1 new message* is shown in standby mode. Press **Show** to open the message.

If you have more than one new message, press **Show** to open the Inbox to see the message headings. To open a message in Inbox, scroll to it and press .

Add a recipient to a message

When you create a message, there are several ways to add a recipient:

- add recipients from the Contacts directory. To open the Contacts directory, press  or  in the *To:* or *Cc:* fields, or select **Options**→*Add recipient*. Scroll to a contact and press  to mark it. You can mark several recipients at a time. Press **OK** to return to the message. The recipients are listed in the *To:* field and automatically separated with a semicolon (;).
- write the phone number or e-mail address of the recipient in the *To:* field, or
- copy the recipient information from another application and then paste it to the *To:* field. See 'Copying text', p. 71.

Press  to the left of the cursor if you want to delete a recipient.

Note: If you write many phone numbers or e-mail addresses in the *To:* field, you must remember to add a semicolon (;) between each item to separate them from each other. When you retrieve recipients from the Contacts directory, the semicolon is added automatically.




Example: 214 123 456; 972 456 876

Sending options


To change how a message is sent, select **Options**→ *Sending options* when you are editing a message. When you save the message, its sending settings are also saved.



• WRITE TEXT





You can key in text in two different ways, using the method traditionally used in mobile phones or another method called predictive text input.

Tip: To set predictive text input on or off, press  twice quickly when writing text.


Use traditional text input






The indicator  is shown on the top right of the display when you are writing text using traditional text input.


- Press a number key ( - ) repeatedly until the desired character appears. Note, that there are more characters available for a number key than are printed on the key.




Icons:  and  indicate the selected case.  means that the first letter in the message and letters occurring after a full stop are written in upper case, and all other letters are written in lower case.  indicates number mode.

- To insert a number, press and hold the number key.



To switch between letter and number mode, press and hold .


- If the next letter is located on the same key as the present one, wait until the cursor appears (or press  to end the time-out period), and then key in the letter.
- If you make a mistake, press  to remove a character. Press and hold  to clear more than one character.
- The most common punctuation marks are available under . Press  repeatedly to reach the desired punctuation mark.



Press  to open a list of special characters. Use the scroll key to move through the list and press **OK** to select a character.

- To insert a space, press . To move the cursor to the next line, press  three times.
- To switch between upper and lower case, press .

Use predictive text input

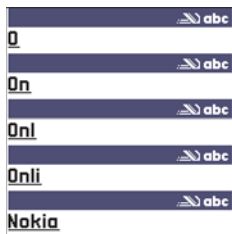




To activate predictive text input, press  and select *Dictionary on*. This will activate predictive text input for all editors in the phone. The  indicator is shown at the top of the display.






- 1 Write the desired word by pressing the keys  - . Press each key only once for one letter. The word changes after every key press.




Note: Do not pay attention to what appears on the display. The word match is evolving. Wait until you have keyed in the whole word before you check the result.

For example, to write 'Nokia' when English dictionary is selected, press





 for N,  for o,  for k,  for i, and  for a.


As you can see, the word suggestion changes after each key press.


- 2 When you have finished the word, check that it is correct.
- If the word is correct, you can confirm it by pressing  or by pressing  to insert a space. The underlining disappears and you can begin to write a new word.
 - If the word is not correct, you have the following options:
 - Press  repeatedly to view the matching words the dictionary has found one by one.






- Press  and select *Dictionary* → *Matches* to view a list of matching words. Scroll to the word you want to use and press  to select it.
- If the ? character is shown after the word, the word you intended to write is not in the dictionary. To add a word to the dictionary, press *Spell*, key in the word (max. 32 letters) using traditional text input, and press *Save*. The word is added to the dictionary. When the dictionary becomes full, a new word replaces the oldest added word.
- To remove the ? and clear characters one by one from the word, press .

TIPS ON USING PREDICTIVE TEXT INPUT


- To erase a character, press . Press and hold  to clear more than one character.
- To change between the different character cases **Abc**, **abc**, and **ABC**, press . Note that if you press  quickly twice the predictive text input is turned off.
- To insert a number in letter mode, press and hold the desired number key.


Or press  and select *Insert number*, key in the numbers you want, and press *OK*.


To switch between letter and number mode, press and hold .

- The most common punctuation marks are available under . Press  and then  repeatedly to reach the desired punctuation mark. Press and hold  to open a list of special characters. Use the scroll key to scroll through the list and press *OK* to select a character. Or press  and select *Insert symbol*.



Tip: The predictive text input will try to guess which commonly used punctuation mark (.,?!') is needed. The order and availability of the punctuation marks depend on the language of the dictionary.

- Press  repeatedly to view the matching words the dictionary has found one by one.


You can also press , select *Dictionary* and select

- **Matches** - to view a list of words that correspond to your key presses. Scroll to the desired word and press the .
- **Insert word** - to add a word (max. 32 letters) to the dictionary by using traditional text input. When the dictionary becomes full, a new word replaces the oldest added word.
- **Edit word** - to open a view where you can edit the word, available only if the word is active (underlined).


Write compound words

Write the first half of a compound word and confirm it by pressing . Write the last part of the compound word and complete the compound word by pressing  to add a space.

Turn off predictive text

Press  and select *Dictionary* → *Off* to turn predictive text input off for all editors in the phone.




Editing options




When you press , the following options appear (depending on the editing mode and situation you are in):






- *Dictionary* (predictive text input), *Alpha mode* (traditional text input), *Number mode*
- *Cut, Copy* - available only if text has been selected first.
- *Paste* - available only when text has been either cut or copied to the clipboard.
- *Insert number, Insert symbol*, and
- *Writing language* - changes the input language for all editors in the phone. See 'Phone settings', p. 25.

COPY TEXT

If you want to copy text to the clipboard, the following are the easiest methods:

- 1 To select letters and words, press and hold . At the same time, press  or . As the selection moves, text is highlighted.

To select lines of text, press and hold . At the same time press  or .

- 2 To end the selection, stop pressing the scroll key.
- 3 To copy the text to clipboard, while still holding , press **Copy**.
Or, release  and then press it once to open a list of editing commands, for example, *Copy* or *Cut*.
If you want to remove the selected text from the document, press .
- 4 To insert the text into a document, press and hold  and press **Paste**.
Or, press  once and select *Paste*.

• CREATE AND SEND NEW MESSAGES

Note: When sending messages, your phone may display the words Message Sent. This is an indication that the message has been sent by your phone to the message center programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about the messaging services, check with your service provider.




You can start to create a message in two ways:

- By selecting *New message* → *Create* → *Short message*, *Multimedia message*, or *E-mail* in the Messaging main view, or
- Start to create a message from an application that has the option *Send*. In this case the file that was selected (such as an image or text) is added to the message.




Write and send short messages

Options in the picture message editor are: *Send*, *Remove picture*, *Add recipient*, *Delete*, *Insert*, *Message details*, *Help*, and *Exit*.

- 1 Select *New message*. A list of message options opens. See Fig. 2, p. 64.
- 2 Select *Create*→*Short message*. The editor opens with the cursor in the *To:* field. Press  to select recipient(s) from the Contacts directory or write the phone number of the recipient. Press  to add a semicolon (;) to separate each recipient. Press  to move to the message field.
- 3 Write the message.

Note: Your phone supports sending of multiple short messages at the same time, therefore, the normal 160 characters limit for one short message can be exceeded. If your text exceeds 160 characters, it will be sent in two or more messages and message sending may cost you more.

In the navigation bar, you can see the message length indicator counting backwards from 160. For example, 10 (2) means that you can still add 10 characters for the text to be sent as two messages.

- 4 To send the message, select *Options*→*Send* or press .

SEND SMART MESSAGES

Options in the short message editor are: *Send*, *Add recipient*, *Insert*, *Delete*, *Message details*, *Sending options*, *Help*, and *Exit*.

Smart messages are special short messages that can contain data. You can send smart messages such as:

- picture messages,
- business cards containing contact information in generic (vCard) format,
- Calendar notes (vCalendar format).

For more information, see 'Sending contact information', p. 47, 'Sending calendar entries', p. 93, and 'Sending bookmarks', p. 103.

Tip: You can also receive ringing tones, operator logos, or settings from service providers, see p. 71.

CREATE AND SEND PICTURE MESSAGES

Options in the picture message editor are: *Send*, *Add recipient*, *Insert*, *Remove picture*, *Delete*, *Message details*, *Help*, and *Exit*.

Your phone allows you to send and receive picture messages. Picture messages are short messages that contain small black-and-white graphics. There are several default pictures available in the *Picture msgs.* folder in **Images**.

Note: This function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.

To send a picture message:

- 1 There are two possibilities, either:
 - Go to **Images**→ *Picture msgs.* and select a picture to be sent. Select **Options**→ *Send*, or
 - Select **Messaging**→ *New message*→ *Create*→ *Short message* and select *Insert*→ *Picture*.



- 2 Enter recipient information and add text. See Fig. 3, p. 73.

- 3 Select **Options**→ *Send* or press .

Note: Each picture message is made up of several short messages. Therefore, sending one picture message may cost more than sending one short message.

Multimedia messages

A multimedia message can contain text, images and either video or sound clips.

Note: This function can be used only if it is supported by your network operator or service provider. Only devices that offer multimedia message or e-mail features can receive and display multimedia messages. Devices that don't have these features will receive details of a link to a web page.

SETTINGS NEEDED FOR MULTIMEDIA MESSAGING

Options in the multimedia message editor are: *Send, Add recipient, Insert, Preview message, Objects, Remove, Delete, Message details, Sending options, Help*, and *Exit*.

You may receive the settings as a smart message from your network operator or service provider. See 'Receiving smart messages', p. 71.

For availability of and subscription to data services, please contact your network operator or service provider.

- 1 Go to *Settings*→*Connection settings*→*Access points* and define the settings for a multimedia messaging access point:

Connection name - Give a descriptive name for the connection.

Session mode - Select a data connection type: *GSM data, High speed GSM, or GPRS*.

Gateway IP address - enter the address



Example: Domain names such as **www.nokia.com** can be translated into IP addresses like **192.100.124.195**.

Homepage - enter the address of the multimedia messaging center.

- If you selected *GSM data* or *High speed GSM*, fill in: *Dial-up number* - a phone number for the data call.
- If you selected *GPRS*, fill in: *Access point name* - the name given to you by your service provider.

For further information on different data connections, see also 'Connection settings', p. 29.

- 2 Go to *Messaging*→*Options*→*Settings*→*Multimedia message*. Open *Preferred connection* and select the access point you created to be used as the preferred connection. See also 'Settings for multimedia messages', p. 81.







SET UP THE MESSAGING STORE

The messaging store defines whether the phone's memory or the memory card are used as default. To define the messaging store:

Messaging→**Options**→**Settings**→**Messaging store** and select either the phone's memory or the memory card, if one is used.

CREATE MULTIMEDIA MESSAGES

Note: When you are sending a multimedia message to any phone other than the Nokia 3650 or Nokia 7650, it is recommended to use a smaller image size and a sound clip that is no longer than 15 seconds. The default setting *Image size: Small*. If you want to check the image size setting, go to **Messaging**→**Options**→**Settings**→**Multimedia message** or select **Options**→**Sending options** when you are creating a multimedia message. When you are sending a multimedia message to an e-mail address or another Nokia 3650 or Nokia 7650, select **Options**→**Sending Options**→**Image size**→**Large** when you are creating a multimedia message.


- 1 In Messaging, select **New message**→**Create**→**Multimedia message** and press .
- 2 Press  to select the recipient(s) from the Contacts directory or write the phone number or e-mail address of the recipient in the **To:** field. Add a semicolon (;) to separate each recipient. Press  to move to the next field.
- 3 You can add the different objects of the multimedia message in any order you want
 - To add an image, select **Options**→**Insert**→**Image** or **New image**.
 - To add a sound, select **Options**→**Insert**→**Sound clip** or **New sound clip**. When sound has been added, the  icon is shown in the navigation bar.
 - To add video, select **Options**→**Insert**→**Video clip**. When the video has been added, the  indicator is shown in the navigation bar.
 - To write text, press .

- If you select **Insert**→ *Image*, *Sound clip*, *Video clip*, or *Template*, a list of items opens. Scroll to the item you wish to add and press **Select**.

Note: If you chose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- If you select **Insert**→ *New image*, Camera opens and you can take a new picture. Press **Remove** to remove the picture and take another instead.
- If you select **Insert**→ *New sound clip*, Recorder opens and you can record a new sound. The new photo or sound is automatically saved and a copy is inserted in the message.


Note: A multimedia message can contain only one photo and one sound or video clip.


- 4 To send the message, select **Options**→ *Send* or press .

PREVIEW A MULTIMEDIA MESSAGE

To see what the multimedia message will look like, select **Options**→ *Preview message*.

REMOVE AN OBJECT FROM A MULTIMEDIA MESSAGE

To remove a multimedia object, select **Options**→ *Remove*→ *Image Video clip* or *Sound clip*. Press  to remove text.

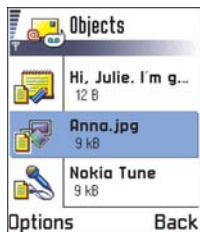

WORK WITH DIFFERENT MEDIA OBJECTS

To see all the different media objects included in a multimedia message, open a multimedia message and select **Options**→ *Objects* to open the Objects view.

In the Objects view, you can change the order of the different objects, delete objects, or open an object in a corresponding application.

Options in the Objects view are: *Open*, *Insert*, *Place image first* / *Place text first*, *Remove*, *Help*, and *Exit*.

E-mail

SETTINGS NEEDED FOR E-MAIL



Before you can send, receive, retrieve, reply to, and forward e-mail, you must:

- Configure an Internet Access Point (IAP) correctly. See 'Connection settings', p. 29.
- Define your e-mail settings correctly. See 'Settings for e-mail', p. 83.

Note: Follow the instructions given by your remote mailbox and Internet Service Provider.

WRITE AND SEND E-MAIL MESSAGES


Options in the e-mail editor are: *Send*, *Add recipient*, *Insert*, *Attachments*, *Delete*, *Message details*, *Sending options*, *Help*, and *Exit*.

- 1 Select *New message*→ *Create*:→ *E-mail*. The editor opens.
- 2 Press  to select the recipient(s) from the Contacts directory or write the e-mail address of the recipient in the *To*: field. Add a semicolon (;) to separate each recipient. If you want to send a copy of your e-mail to someone, write the address in the *Cc*: field. Press  to move to the next field.
- 3 Write the message. If you want to add an attachment to the e-mail, select *Options*→ *Insert*→ *Image*, *Sound clip*, *Video clip*, or *Note*. (NEED GRAPHIC) *will appear in the navigation bar to indicate that the e-mail has an attachment*. *Template* adds pre-written text to the e-mail.

You can also add an attachment to an e-mail by selecting *Options*→ *Attachments* in an open e-mail. The *Attachments* view opens where you can add, view, and remove attachments.

Note: If you choose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- 4 To remove an attachment, scroll to the attachment and select *Options*→ *Remove*.


5 To send the e-mail, select **Options**→ *Send* or press .

Note: E-mail messages are automatically placed in Outbox before sending. In case something goes wrong while the phone is sending the e-mail, the e-mail is left to Outbox with the status *Failed*.

Tip: If you want to send other files than photos, sounds, and notes as attachments, open the appropriate application and select the option *Send*→ *Via e-mail*, if available.

ATTACHMENT VIEW – ADD AND REMOVE ATTACHMENTS

To add an attachment to an e-mail, select **Options**→ *Attachments* in an open e-mail. The Attachments view opens where you can add, view, and remove attachments.

- To add an attachment, select **Options**→ *Insert*→ *Image*, *Sound clip*, *Video clip*, or *Note*. A list of items opens, scroll to the one you want to add and press **OK**.  will appear in the navigation bar to indicate that the e-mail has an attachment.


Note: If you chose *Image*, first you need to select whether the image is stored in the phone's memory or the memory card, if one is used.

- To remove an attachment, scroll to the attachment and select **Options**→ *Remove*.












• INBOX – RECEIVE MESSAGES


Options in Inbox are: *Open*, *Create message*, *Delete*, *Message details*, *Move to folder*, *Move to phone memory* (shown if you have defined the memory card as the messaging store), *Move to memory card* (shown if you have defined the phone's memory as the messaging store), *Mark/Unmark*, *Help*, and *Exit*.



Messages and data can be received via short message or multimedia service, via an infrared, or Bluetooth connection. When there are unread messages in Inbox, the icon changes to .

In Inbox, unread messages appear in bold. The message icons tell you what kind of a message it is. Here are some of the icons that you may see:

-  for an unread short message and  for an unread smart message,
-  for an unread multimedia message,
-  for an unread service message,
-  for an unread multimedia message,
-  for an unread service message,
-  for data received via infrared,
-  for data received via Bluetooth, and
-  for an unknown message type.

View messages in Inbox

To open a message, scroll to the message and press .


Use the scroll key to move up and down in the message. Press  or  to move to the previous or next message in the folder.

Options in different message viewers

The available options depend on the type of message you have opened for viewing:


- *Save picture* – saves the picture to **Images**→ *Picture msgs.*
- *Reply* – copies the address of the sender to the *To:* field. Select *Reply*→ *To all* – to copy the address of the sender and *Cc.* field recipients to the new message.
- *Forward* – copies the message contents to an editor.


Note: You will not be able to Forward items that you have purchased.
For more information, see

- *Call* – call by pressing .
- *View image* – allows you to view and save the image.
- *Play sound clip* – allows you to listen to the sound in the message.
- *Objects* – shows you a list of all the different multimedia objects in a multimedia message.

- *Attachments* – shows you a list of files sent as e-mail attachments.
- *Message details* – shows detailed information about a message.
- *Move to folder / Copy to folder* – allows you to move or copy message(s) to My folders, Inbox, or other folders you have created. See 'Moving items to a folder', p. 12.
- *Add to Contacts* – allows you to copy the phone number or e-mail address of the message sender to the Contacts directory. Choose whether you want to create a new contact card or add the information to an existing contact card.
- *Find* – Searches the message for phone numbers, e-mail addresses, and Internet addresses. After the search, you can make a call or send a message to the found number or e-mail address, or save the data to Contacts or as a WAP bookmark.

View multimedia messages in Inbox

You can recognize multimedia messages by their **icon** .

To open a multimedia message, scroll to it and press . You can see an image, read a message and hear a sound, simultaneously.


If sound is playing, press  or  to increase or decrease the sound volume. If you want to mute the sound, press **Stop**.

MULTIMEDIA MESSAGE OBJECTS

Options in the Objects view are: *Open*, *Save*, *Send*, *Call*, and *Exit*.

Note: You will not be able to Send objects that you have purchased. For more information, see

To see what kinds of media objects have been included in the multimedia message, open the message and select **Options**→ *Objects*. In the Objects view you can view files that have been included in the multimedia message. You can choose to save the file in your phone or to send it, for example, via infrared to another device.




To open a file, scroll to it and press the .

Important: Multimedia message objects may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see 'Certif. management', p. 37.



Example: You can open a vCard file and save the contact information in the file to Contacts.



SOUNDS IN A MULTIMEDIA MESSAGE

Sound objects in a multimedia message are indicated by  indicator in the navigation bar. Sounds are by default played through the loudspeaker. To stop the sound, press **Stop** while sound is playing. You can change the volume level by pressing  or .

If you want to listen to a sound again after all the objects have been shown and the playing of the sound has stopped, select **Options**→ *Play sound clip*.

Receive smart messages

Tip: If you receive a vCard file that has a picture attached, the picture will be saved to Contacts as well.

Your phone can receive many kinds of smart messages, short messages that contain data (also called Over-The-Air (OTA) messages). To open a received smart message, open Inbox, scroll to the smart message () , and press .

- *Picture message* - to save the picture in the *Picture msgs.* folder in **Images** for later use, select **Options**→ *Save picture*.
- *Business card* - to save the contact information, select **Options**→ *Save business card*.

Note: If certificates or sound files are attached to business cards, they will not be saved.

- *Ringing tone* - to save the ringing tone to Composer, select **Options**→ *Save*.
- *Operator logo* - to save the logo, select **Options**→ *Save*. The operator logo can now be seen in standby mode instead of the network

operator's own identification.

- *Calendar entry* - to save the invitation to Calendar, select **Options**→ *Save to Calendar*.
- *WAP message* - to save the bookmark, select **Options**→ *Save to bookmarks*. The bookmark is added to the Bookmarks list in WAP services.

If the message contains both WAP access point settings and bookmarks, to save the data select **Options**→ *Save all*. Or, select **Options**→ *View details* to view the bookmark and access point information separately. If you do not want to save all data, select a setting or bookmark, open the details and select **Options**→ *Save to Settings* or *Save to bookmarks* depending on what you are viewing.

Tip: To later change the default access point settings for WAP or multimedia messaging, go to **Services**→ **Options**→ *Settings*→ *Default access point* or **Messaging**→ **Options**→ *Settings*→ *Multimedia message*→ *Preferred connection*.

- *E-mail notification* - Tells you how many new e-mails you have in your remote mailbox. An extended notification may list more detailed information such as subject, sender, attachments, and so on.
- In addition, you can receive a short message service number, voice mailbox number, profile settings for remote synchronization, access point settings for WAP, multimedia messaging or e-mail, access point login script settings, or e-mail settings.

To save the settings, select **Options**→ *Save to SMS sett.*, *Save to Voice mail*, *Save to settings*, *Save to Settings*, or *Save to e-mail sett.*

WAP service messages

Options when viewing a WAP service message are: *Download message*, *Move to folder*, *Message details*, *Help*, and *Exit*.

You can order WAP service messages (pushed messages) from WAP service providers. WAP service messages are notifications of, for example, news headlines and they may contain a text message or address of a WAP service. For availability and subscription, contact your WAP service provider.

Service providers can update an existing WAP service message every time a new WAP service message is received. Messages can be updated even if you have moved them to another folder than Inbox. When service messages expire, they are deleted automatically.

VIEWING WAP SERVICE MESSAGES IN INBOX

- 1 In Inbox, scroll to a WAP service message (🌐) and press (🔍).
- 2 To download or view the service, press **Download message**. The note *Downloading message* is displayed. The phone starts to make a data connection, if needed.
- 3 Press **Back** to return to Inbox.

VIEWING WAP SERVICE MESSAGES IN THE WAP BROWSER

When you are browsing, select **Options**→ *Read service msgs.* to download and view new WAP service messages.



• MY FOLDERS

Options in My folders are: *Open, New message, Delete, Message details, Move to folder, Move to phone memory* (shown if you have defined the memory card as the messaging store), *Move to memory card* (shown if you have defined the phone memory as the messaging store), *New folder, Rename, Help*, and *Exit*.

In My folders you can organize your messages into folders, create new folders, and rename and delete folders. Select **Options**→ *Move to folder, New folder*, or *Rename folder*. For more information, see 'Moving items to a folder', p. 12.

Templates folder

You can use text templates to avoid rewriting messages that you send often. To create a new template, select **Options**→ *New template*.



• REMOTE MAILBOX

When you open this folder, you can either connect to your remote mailbox.

- to retrieve new e-mail headings or messages, or
- view your previously retrieved e-mail headings or messages offline.


Tip: The Settings wizard program included in the PC Suite for Nokia 3650 can help you configure access point and mailbox settings. You can also copy existing settings, for example, from your computer to your phone. See the CD-ROM supplied in the sales package.

If you select *New message*→ *Create*:→ *E-mail* or *Mailbox* in the Messaging main view and you have not set up your e-mail account, you will be prompted to do so. See 'Settings needed for e-mail', p. 68.

When you create a new mailbox, the name you give to the mailbox automatically replaces *Mailbox* in the Messaging main view. You can have several mailboxes (max. six).

Open the mailbox

When you open the mailbox, you can choose whether you want to view the previously retrieved e-mail messages and e-mail headings offline or connect to the e-mail server.

When you scroll to your mailbox and press , the phone asks you if you want to *Connect to mailbox?* Select *Yes* to connect to your mailbox or *No* to view previously retrieved e-mail messages offline.

Another way to start a connection is to select **Options**→ *Connect*.

VIEW E-MAIL MESSAGES WHEN ONLINE

When you are online, you are continuously connected to a remote mailbox via a data call or a packet data connection. See also 'Data connection indicators', p. 9, 'GSM data calls', p. 32, and 'Packet data (General Packet Radio Service, GPRS)', p. 33.

Note: If you are using the POP3 protocol, e-mail messages are not updated automatically in online mode. To see the newest e-mail messages, you need to disconnect and then make a new connection to your mailbox.

Options when viewing e-mail headings are: *Open*, *New message*, *Connect / Disconnect*, *Retrieve*, *Delete*, *Message details*, *Copy*, *Mark/Unmark*, *Help*, and *Exit*.

VIEW E-MAIL MESSAGES WHEN OFFLINE

When you view e-mail messages offline, your phone is not connected to the remote mailbox. This mode may help you to save on connection costs. See p. 32 for further information.



To view e-mail messages offline, you must first retrieve e-mail messages from your mailbox, see the next section. After you have retrieved the e-mail messages to your phone, to end the data connection, select **Options**→ *Disconnect*.

Now you can continue reading the retrieved e-mail headings and/or the retrieved e-mail messages offline. You can write new e-mail messages, reply to the retrieved e-mail messages, and forward e-mail messages. You can order the e-mail messages to be sent the next time you connect to the mailbox. When you open *Mailbox* the next time and you want to view and read the e-mail messages offline, answer **No** to the *Connect to mailbox?* query.

Retrieve e-mail messages from the mailbox

Options when viewing an e-mail message are: *Reply*, *Forward*, *Delete*, *Attachments*, *Message details*, *Move to folder*, *Add to Contacts*, *Find*, *Help*, and *Exit*.

If you are offline, select **Options**→ *Connect* to start a connection to a remote mailbox.

The remote mailbox view is similar to the Inbox folder in Messaging. You can move up and down in the list by pressing  or . The following icons are used to show the status of the e-mail:

- new e-mail (offline or online mode). The content has not been retrieved from the mailbox to your phone (the arrow in the icon is pointing outwards).



- new e-mail, the content has been retrieved from the mailbox (arrow pointing inwards).



- for e-mail messages that have been read.



- for e-mail headings that have been read and the message content has been deleted from the phone.

1 When you have an open connection to a remote mailbox, select **Options**→ *Retrieve*→

- *New* - to retrieve all new e-mail messages to your phone.
 - *Selected* - to retrieve only the e-mail messages that have been selected. Use the *Mark/Unmark*→ *Mark* / *Unmark* commands to select messages one by one. See p. 11 for information on how to select many items at the same time.
 - *All* - to retrieve all messages from the mailbox.
- To cancel retrieving, press **Cancel**.




2 After you have retrieved the e-mail messages, you can continue viewing them online. Select **Options**→ *Disconnect* to close the connection and to view the e-mail messages offline.

COPY E-MAIL MESSAGES TO ANOTHER FOLDER

If you want to copy an e-mail from the remote mailbox to a folder under My folders, select **Options**→ *Copy*. Select a folder from the list and press **OK**.

Open e-mail messages


When you are viewing e-mail messages either in online or offline mode, scroll to the e-mail you want to view and press  to open it. If the e-mail message has not been retrieved (arrow in the icon is pointing outwards) and you are offline and select *Open*, you will be asked if you want to retrieve this message from the mailbox. Note that the data connection is left open after the e-mail has been retrieved. Select **Options**→ *Disconnect* to end the data connection.

Disconnect from mailbox

When you are online, select **Options**→ *Disconnect* to end the data call or GPRS connection to the remote mailbox. See also 'Data connection indicators', p. 9.

View e-mail attachments

Options in the Attachments view are: *Open*, *Retrieve*, *Save*, *Send*, *Delete*, *Help*, and *Exit*.

Open a message that has the attachment indicator  and select **Options**→ *Attachments* to open the Attachments view. In the Attachments view, you can retrieve, open, or save attachments. You can also send attachments via infrared or Bluetooth.

Important: E-mail attachments may contain viruses or otherwise be harmful to your phone or PC. Do not open any attachment if you are not sure of the trustworthiness of the sender. For more information, see 'Certif. management', p. 37.


Retrieve attachments to the phone

If the attachment has a dimmed indicator, it has not been retrieved to the phone. To retrieve the attachment, scroll to it and select **Options**→ *Retrieve*.

Note: If your mailbox uses the IMAP 4 protocol, you can decide whether to retrieve e-mail headings only, messages only, or messages and attachments. With the POP3 protocol, the options are e-mail headings only or messages and attachments. For further information, see p. 83.

Tip: To save memory, you can remove attachments from an e-mail while retaining them on the e-mail server. Select **Options**→ *Delete* in the Attachments view.

Open an attachment

- 1 In the Attachments view, scroll to an attachment and press  to open it.
 - If you are online, the attachment is retrieved directly from the server and opened in the corresponding application.
 - If you are offline, the phone asks if you want to retrieve the attachment to the phone. If you answer *Yes*, a connection to the remote mailbox is started.
- 2 Press **Back** to return to the e-mail viewer.

Tip: Supported image formats are listed on p. 54. To see a list of other file formats supported by the Nokia 3650, go and see the product information at www.nokia.com.

SAVE ATTACHMENTS SEPARATELY

To save an attachment, select **Options**→ *Save* in the Attachments view. The attachment is saved in the corresponding application. For example, sounds can be saved in Recorder and text files (.TXT) in Notes.

Attachments such as images can be saved on a memory card, is one is used.

Delete e-mail messages


To delete an e-mail from the phone while still retaining it in the remote mailbox, select **Options**→ *Delete* → *Phone only*.

Note: The phone mirrors the e-mail headings in the remote mailbox. So, although you delete the message content, the e-mail heading stays in your phone. If you want to remove the heading as well, you have to first delete the e-mail message from your remote mailbox and then make a connection from your phone to the remote mailbox again to update the status.

To delete an e-mail from both the phone as well as from the remote mailbox, select **Options**→ *Delete* → *Phone and server*.

Note: If you are offline, the e-mail will be deleted first from your phone. During the next connection to the remote mailbox, it will be automatically deleted from the remote mailbox. If you are using the POP3 protocol, messages marked to be deleted are removed only after you have closed the connection to the remote mailbox.

UNDELETE E-MAIL MESSAGES WHEN OFFLINE

To cancel deleting an e-mail from both the phone and server, scroll to an e-mail that has been marked to be deleted during the next connection () , and select **Options**→ *Undelete*.



• OUTBOX

The Outbox is a temporary storage place for messages waiting to be sent.

Status of the messages in Outbox

- *Sending* - A connection is being made and the message is being sent.
- *Waiting/Queued* - For example, if there are two similar types of messages in Outbox, one of them is waiting until the first one is sent.
- *Resend at (time)* - Sending has failed. The phone will try to send the message again after a time-out period. Press *Send* if you want to restart the sending immediately.
- *Deferred* - You can set documents to be 'on hold' while they are in Outbox. Scroll to a message that is being sent and select **Options**→ *Defer sending*.
- *Failed* - The maximum number of sending attempts has been reached. Sending has failed. If you were trying to send a short message, open the message and check that the Sending settings are correct.



Example: Messages are placed in the Outbox, for example, when your phone is outside the network coverage area. You can also schedule e-mail messages to be sent the next time you connect to your remote mailbox.

• VIEW MESSAGES ON A SIM CARD

Before you can view SIM messages, you need to copy them to a folder in your phone.

- 1 In the Messaging main view, select **Options**→ *SIM messages*.
- 2 Select **Options**→ *Mark/Unmark*→ *Mark* or *Mark all* to mark messages.
- 3 Select **Options**→ *Copy*. A list of folders opens.
- 4 Select a folder and press **OK**. Go to the folder to view the messages.






• CELL BROADCAST (NETWORK SERVICE)

Options in Cell broadcast are: *Open, Subscribe / Unsubscribe, Hotmark / Unhotmark, Topic, Settings, Help, and Exit*.

In the Messaging main view, select **Options**→ *Cell broadcast*.

You can receive messages on various topics, such as weather or traffic conditions from your service provider. For available topics and relevant topic numbers, contact your service provider. In the main view you can see:

- the status of the topic:  - for new, subscribed messages and  - for new, unsubscribed messages.
- the topic number, topic name, and whether it has been flagged () for follow-up. You will be notified when messages belonging to a flagged topic have arrived.

Note: A packet data (GPRS) connection may prevent cell broadcast reception. Contact your network operator for the correct GPRS settings. For further information on the GPRS settings, see 'Packet data (General Packet Radio Service, GPRS)', p. 33.



• SERVICE COMMAND EDITOR

In the Messaging main view, select **Options**→ *Service command*.

You can send service requests, such as activation commands for network services (also known as USSD commands), to your service provider. For more information, contact your service provider. To send a request:

- in standby mode or when you have an active call, key in the command number(s) and press **Send**, or
- if you need to enter letters as well as numbers, select **Messaging**→ **Options**→ *Service command*.

• MESSAGING SETTINGS

The Messaging settings are divided into groups according to the different message types. Scroll to the settings you want to edit and press

Settings for short messages

Options when editing short message center settings are: *New msg. center*, *Edit*, *Delete*, *Help*, and *Exit*.

Go to **Messaging** and select **Options**→ *Settings*→ *Short message* to open the following list of settings:

- *Message centers* - Lists all the short message service centers that have been defined. See 'Adding a new short message center', p. 81.
- *Msg. center in use* (Message center in use)- Defines which message center is used for delivering short messages and smart messages such as picture messages.
- *Receive report* (delivery report)- When this network service is set to *Yes*, the status of the sent message (*Pending*, *Failed*, *Delivered*) is shown in the Log.
- *Message validity* - If the recipient of a message cannot be reached within the validity period, the message is removed from the short message service center. Note that the network must support this feature. *Maximum time* is the maximum amount of time allowed by




the network.


- *Message sent as* – The options are *Text*, *Fax*, *Paging*, and *E-mail*. For further information, contact your network operator.

Note: Change this option only if you are sure that your service center is able to convert short messages into these other formats.

- *Preferred connection* – You can send short messages via the normal GSM network or via GPRS, if supported by the network. See 'Packet data (General Packet Radio Service, GPRS)', p. 30.
- *Reply via same ctr.* (network service) – By setting this option to *Yes*, if the recipient replies to your message, the return message is sent using the same short message service center number. Note that this may not work between all operators.

ADD A NEW SHORT MESSAGE CENTER

- 1 Open *Message centers* and select **Options**→ *New msg. center*.
- 2 Press , write a name for the service center and press **OK**.
- 3 Press , press  and write the number of the short message service center (**Must be defined**). Press **OK**. You need the message center number to send short and picture messages. You can get the number from your service provider.

To use the new settings, go back to the settings view and scroll to *Msg. center in use*. Press  and select the new service center.

Settings for multimedia messages

Go to **Messaging** and select **Options**→ *Settings*→ *Multimedia message* to open the following list of settings:

- *Preferred connection* (**Must be defined**) – Select which access point is used as the preferred connection for the multimedia message center. See 'Settings needed for multimedia messaging', p. 65.

Note: If you receive multimedia message settings in a smart message and save them, the received settings are automatically used for the Preferred connection. See 'Receiving smart messages', p. 71.

- *Secondary conn.* - Select which access point is used as the secondary connection for the multimedia message center.

Note: Both *Preferred connection* and *Secondary conn.* must have the same *Homepage* setting pointing to the same multimedia service center. Only the data connection is different.



Example: If your preferred connection uses a packet data connection, you may want to use high speed data or data call for the secondary connection. This way you are able to send and receive multimedia messages even when you are not in a network that supports packet data. For availability of and subscription to data services, please contact your network operator or service provider. See also 'General information about data connections and access points', p. 29.

- *Multimedia reception* - Select:
Only in home net. - if you want to receive multimedia messages only when you are in your home network. When you are outside your home network, multimedia message reception is turned off.
Always on - if you want to receive multimedia messages always.
Off - if you do not want to receive multimedia messages or advertisements at all.

Important: When you are outside your home network, sending and receiving multimedia messages may cost you more. If the settings *Only in home net.* or *Always on* have been selected, your phone can make an active data call or GPRS connection without your knowledge.

- *On receiving msg.* - Select:
Retr. immediately - if you want the phone to retrieve multimedia messages instantly. If there are messages with Deferred status, they will be retrieved as well.
Defer retrieval - if you want the multimedia messaging center to save the message to be retrieved later. To retrieve the message later, set *On receiving msg.* to *Retr. immediately*.
Reject message - if you want to reject multimedia messages. The multimedia messaging center will delete the messages.

- *Allow anon. messages* - Select *No*, if you want to reject messages coming from an anonymous sender.
- *Receive adverts* - Define whether you want to receive multimedia message advertisements or not.
- *Reports* - Set to *Yes*, if you want the status of the sent message (*Pending, Failed, Delivered*) to be shown in the Log. When set to *No*, only the status *Delivered* is shown in the Log. See p. 19.
- *Deny report sending* - Choose *Yes*, if you do not want your phone to send delivery reports of received multimedia messages.
- *Message validity* - If the recipient of a message cannot be reached within the validity period, the message is removed from the multimedia messaging center. Note that the network must support this feature. *Maximum time* is the maximum amount of time allowed by the network.
- *Image size* - Define the size of the image in a multimedia message. The options are: *Small* (max. of 160*120 pixels) and *Large* (max. 640*480 pixels).
- *Speaker* - Choose *Loudspeaker or Normal*, if you want the sounds in a multimedia message to be played through the loudspeaker or the earpiece. For more information, see 'Built-in loudspeaker', p. 13.

Settings for e-mail

Go to **Messaging** and select **Options**→ *Settings*→ *E-mail*.

Options when editing e-mail settings are: *Editing options, New mailbox, Delete, Call, and Exit.*

Open *Mailbox in use* to select which mailbox you want to use.

SETTINGS FOR MAILBOXES

Select *Mailboxes* to open a list of mailboxes that have been defined. If no mailboxes have been defined, you will be prompted to do so. The following list of settings is shown:

- *Mailbox name* - Write a descriptive name for the mailbox.

- *Access point in use* (**Must be defined**) - The Internet Access Point (IAP) used for the mailbox. Choose an IAP from the list. For more information on how to create an IAP, see also 'Connection settings', p. 29.
- *My mail address* (**Must be defined**) - Write the e-mail address given to you by your service provider. The address must contain the @ character. Replies to your messages are sent to this address.
- *Outgoing mail server:* (**Must be defined**) - Write the IP address or host name of the computer that sends your e-mail.
- *Send message* - Define how e-mail is sent from your phone.
Immediately - A connection to the mailbox is started immediately after you have selected *Send*. *During next conn.* - E-mail is sent when you connect to your remote mailbox the next time.
- *Send copy to self* - Select *Yes* to save a copy of the e-mail to your remote mailbox and to the address defined in *My mail address*.
- *Include signature* - Select *Yes* if you want to attach a signature to your e-mail messages and to start to write or edit a signature text.
- *User name:* - Write your user name, given to you by your service provider.
- *Password:* - Write your password. If you leave this field blank, you will be prompted for the password when you try to connect to your remote mailbox.
- *Incoming mail server:* (**Must be defined**) - The IP address or host name of the computer that receives your e-mail.
- *Mailbox type:* - Defines the e-mail protocol your remote mailbox service provider recommends. The options are *POP3* and *IMAP4*.

Note: This setting can be selected only once and cannot be changed if you have saved or exited from the mailbox settings.

- *Security* - Used with the POP3, IMAP4, and SMTP protocols to secure the connection to the remote mailbox.
- *APOP secure login* - Used with the POP3 protocol to encrypt the

sending of passwords to the remote e-mail server. Not shown if IMAP4 is selected for *Mailbox type*:

- *Retrieve attachment* (not shown if the e-mail protocol is set to POP3) – To retrieve e-mail with or without attachments.
- *Retrieve headers* – To limit the number of e-mail headers you want to retrieve to your phone. The options are *All* and *Userdefined*. Used with IMAP4 protocol only.

Settings for WAP service messages

When you go to **Messaging** and select **Options**→ *Settings*→ *Service message*, the following list of settings opens:

- *Service messages* – Choose whether or not you want to receive WAP service messages.
- *Authentic. needed* – Choose if you want to receive WAP service messages only from authorized sources.

Settings for Cell broadcast

Check with your service provider to see if Cell broadcast is available and what available topics and numbers are. Go to **Messaging**→ **Options**→ *Settings*→ *Cell broadcast* to change the settings: *Reception* – *On* or *Off*,

- *Language* – *All* allows you to receive cell broadcast messages in every possible language. *Selected* allows you to choose in which languages you wish to receive cell broadcast messages. If the language you want could not be found in the list, select *Other*.
- *Topic detection* – If you receive a message that does not belong to any of the existing topics, *Topic detection*→ *On* allows you to save the topic number automatically. The topic number is saved to the topic list and shown without a name. Choose *Off* if you do not want to save new topic numbers automatically.

Settings for the Sent folder

Go to **Messaging** and select **Options**→ *Settings*→ *Sent folder* to open the following list of settings:

- *Save sent messages* - Choose if you want to save a copy of every short message, multimedia message, or e-mail that you have sent to the Sent items folder.
- *No. of saved msgs.* - Define how many sent messages will be saved to the Sent items folder at a time. The default limit is 15 messages. When the limit is reached, the oldest message is deleted.
- *Memory in use* - Define memory store. Choices are phone's memory or memory card, if one is used.

• INSTANT MESSAGING

You can send and receive Instant Messages through _____ Instant Messenger service. Check with your service provider for availability. Instant Messaging is different from using SMS or email because with _____ you can have a true, two-way conversation with other users, in chat groups, or private chats.

Get your Screen Name and password


Before you can start using _____, you must first get a Screen Name and password from your service provider's Instant Messaging service when you subscribe. Information on the web site helps you register a Screen Name and password. You can also download and install the service on your PC.

Sign On to your Instant Messaging service

Go to **Menu**→ **Settings**→ *Open*

Options in the main view are: *Conversations, Friends,* and *Chat Rooms.*

To begin using Instant Messaging for the first time:

- 1 Select *Conversations, Friends, or Chat Rooms* and press .
- 2 The *Settings* view opens.
- 3 Username
- 4 Password

Conversations

Options in the Conversations view are: *Send*, *Add to friends*, *Block messages*, *Show private chats*, *Close conversation*, *Save to notes*, *Help*, and *Exit*.

Friends

Chat




8 Profiles

Go to **Menu**→**Profiles**.

In Profiles, you can adjust and customize the phone tones for different events, environments, or caller groups. There are five preset profiles: *General*, *Silent*, *Meeting*, *Outdoor*, and *Pager*, which you can customize to meet your needs.

You can see the currently selected profile at the top of the display in standby mode. If the General profile is in use, only the current date is shown.

The tones can be default ringing tones, tones created in Composer, tones received in a message, or transferred to your phone via infrared, Bluetooth, or a PC connection and then saved to your phone.

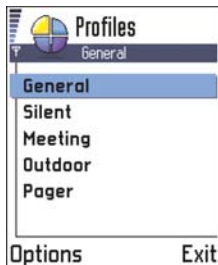


• CHANGE THE PROFILE


- 1 Go to **Menu**→**Profiles**. A list of profiles opens.
- 2 In the Profiles list, scroll to a profile and select **Options**→*Activate*.

Shortcut: To change the profile, press **(C)** in standby mode. Scroll to the profile you want to activate and press **OK**.

• CUSTOMIZE PROFILES

- 1 To modify a profile, scroll to the profile in the Profiles list and select **Options**→*Personalize*. A list of profile settings opens.
- 2 Scroll to the setting you want to change and press **(C)** to open the choices:

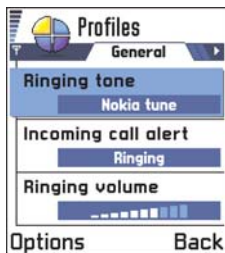

- *Ringtone* - To set the ringing tone for voice calls, choose a ringing tone from the list. When you scroll through the list, you can stop on a tone to listen to it before you make your selection. Press any key to stop the sound. If a memory card is used, tones stored on it have the  icon next to tone name.

Ringtone tones use shared memory. See "Shared memory" on page 27.

Note: You can change ringtone tones in two places: Profiles or Contacts. See "Add a ringtone tone for a contact card or group" on page 69.

- *Incoming call alert* - When *Ascending* is selected, the ringing volume starts from level one and increases level by level to the set volume level.
- *Ringtone volume* - To set the volume level for the ringing and message alert tones.
- *Message alert tone* - To set the tone for messages.
- *Vibrating alert* - To set the phone to vibrate at incoming voice calls and messages.
- *Keypad tones* - To set the volume level for keypad tones.
- *Warning tones* - The phone sounds a warning tone, for example, when the battery is running out of power.
- *Alert for* - To set the phone to ring only upon calls from phone numbers that belong to a selected contact group. Phone calls coming from people outside the selected group will have a silent alert. The choices are *All calls* / (list of contact groups, if you have created them). See "Create contact groups" on page 70.
- *Profile name* - You can rename a profile and give it any name you want. The General profile cannot be renamed.



9 Favorites

Go to **Menu**→ **Favorites**.

GET NEW ICON

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



You can use Favorites to store shortcuts, links to your favorite photos, video clips, notes, Recorder sound files, WAP bookmarks, and saved WAP pages.

The default shortcuts:



- opens the Notes editor,



- opens the Calendar with the current date selected,



- opens the Messaging Inbox.

Options in the Favorites main view are: *Open, Edit shortcut name, Delete shortcut, Move, List view / Grid view, Help,* and *Exit*.


• ADD SHORTCUTS

Shortcuts can be added only from the individual applications. Not all applications have this functionality.

- 1 Open the application and scroll to the item that you want to add as a shortcut to Favorites.
- 2 Select **Options**→ *Add to Favorites* and press **OK**.

Note: A shortcut in Favorites is automatically updated if you move the item it is pointing to, for example, from one folder to another.

In Favorites:

- **To open a shortcut**, scroll to the icon and press . The file is opened in the corresponding application.
- **To delete a shortcut**, scroll to the shortcut you want to remove and select **Options**→ *Delete shortcut*. Removing a shortcut does not affect the file it is referring to.
- **To change the shortcut heading**, select **Options**→ *Edit shortcut name*. Write the new name. This change affects only the shortcut, not the file or item the shortcut refers to.



10 Calendar and To-do

Go to **Menu**→ **Calendar**


Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Options when editing a calendar entry are: *Delete*, *Send*, *Help*, and *Exit*.

In Calendar, you can keep track of your appointments, meetings, birthdays, anniversaries, and other events. You can also set a calendar alarm to remind you of upcoming events.


Calendar uses shared memory. See "Shared memory" on page 27.

• CREATE CALENDAR ENTRIES

- 1 Select **Options**→ *New entry* and select:
 - *Meeting* to remind you of an appointment that has a specific date and time.
 - *Memo* to write a general entry for a day.
 - *Anniversary* to remind you of birthdays or special dates. Anniversary entries are repeated every year.
- 2 Fill in the fields, see the "Calendar entry fields" on page 128. Use the scroll key to move between fields. Press  to change between upper and lower case.
- 3 To save the entry, press **Done**.




Edit calendar entries

- 1 In the Day view, scroll to the entry and press  to open it.
 - 2 Edit the entry fields and press **Done**.
- If you are editing a repeated entry, choose how you want the changes

to take effect: *All occurrences* – all repeated entries are changed / *This entry only* – only the current entry will be changed.




Delete calendar entries

- In the Day view, scroll to the entry you want to delete and select **Options**→ *Delete* or press . Press **OK** to confirm.
- If you are deleting a repeated entry, choose how you want the change to take effect: *All occurrences* – all repeated entries are deleted / *This entry only* – only the current entry will be deleted.



Example: Your weekly class has been cancelled. You have set the calendar to remind you every week. Choose *This entry only* and the calendar will remind you again next week.

Calendar entry fields

- *Subject* / *Occasion* – Write a description of the event.
- *Location* – the place of a meeting, optional.
- *Start time*, *End time*, *Start date*, and *End date*.
- *Alarm* – Press  to activate the fields for *Alarm time* and *Alarm date*.
- *Repeat* – Press  to change the entry to be repeating. Shown with  in the Day view.



Example: The repeat function is handy if you have a recurring event, a weekly class, a biweekly meeting, or a daily routine you need to remember.


- *Repeat until* – You can set an ending date for the repeated entry, for example, the ending date of a weekly course you are taking. This option is shown only if you have selected to repeat the event.
- *Synchronization* – If you select *Private*, after synchronization the calendar entry can be seen only by you and it will not be shown to others with online access to view the calendar. This is useful when, for example, you synchronize your calendar on a compatible computer at work. If you select *Public*, the calendar entry is shown to others who have access to view your calendar online. If you select *None*, the calendar entry will not be copied to your PC when you


synchronize your calendar.


Calendar views

MONTH VIEW




In the Month view, one row equals one week. Today's date is underlined. Dates that have calendar entries are marked with a small triangle at the right bottom corner. There is a frame around the currently selected date.

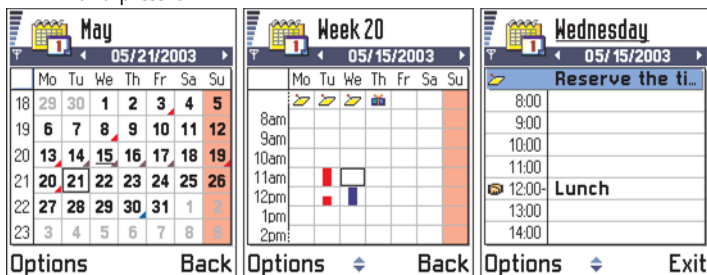- To open the Day view, scroll to the date you want to open and press 
- To go to a certain date, select **Options** → *Go to date*. Write the date and press **OK**.



Tip: If you press  in Month, Week, or Day views, today's date is automatically highlighted.

Calendar entry icons in Day and Week views



-  *Meeting*
-  *Memo*
-  *Anniversary*

Synchronization icons in Month view

-  *Private*
-  *Public*
-  *None*
-  *The day has more than one view*

WEEK VIEW




In the Week view, the calendar entries for the selected week are shown in seven day boxes. Today's day of the week is underlined. Memos and Anniversaries are placed before 8 o'clock. Meeting entries are marked with colored bars according to starting and ending times.

To view or edit an entry, scroll to the cell that has an entry and press  to open the Day view, then scroll to the entry and press  to open it.

Options in the different calendar views are: *Open, New entry, Week view/Month view, Delete, Go to date, Send, Settings, Help, and Exit.*

DAY VIEW



In the Day view, you can see the calendar entries for the selected day. The entries are grouped according to their starting time. Memos and Anniversaries are placed before 8 o'clock.

- To open an entry for editing, scroll to it and press .
- Press  to go to the next day or press  to go to the previous day.

SETTINGS FOR CALENDAR VIEWS



Select **Options**→ *Settings* and select:

- *Default view* - To select the view that is shown first when you open Calendar.
- *Week starts on* - To change the starting day of the week.
- *Week view title* - To change the title of the Week view to be the week number or the week dates.

Shortcut: To write a calendar entry, press any key ( - ) in any calendar view. A Meeting entry is opened and the characters you keyed in are added to the *Subject* field.

• SET CALENDAR ALARMS

- 1 Create a new Meeting or Anniversary entry, or open a previously created entry.

- 2 Scroll to *Alarm* and press  to open the *Alarm time* and *Alarm date* fields.
- 3 Set the alarm time and date.
- 4 Press **Done**. An alarm indicator  is shown next to the entry in the Day view.

Stop a calendar alarm

The alarm duration is one minute. When the alarm time expires, press **Stop** to end the calendar alarm. If you press any other key, the alarm is set to snooze.

• SEND CALENDAR ENTRIES

In the Day view, scroll to the entry you want to send and select **Options**→*Send*. Then select the method, the choices are: *Via short message*, *Via e-mail* (available only if the correct e-mail settings are in place), *Via Bluetooth*, or *Via infrared*. For further information, see the "Messaging" on page 87, "Send and receive data via infrared" on page 162, and "Send data via Bluetooth" on page 157.







• TO-DO

Go to **Menu**→**To-do**.

In To-do you can keep a list of tasks that you need to do.



The To-do list uses shared memory. See "Shared memory" on page 27.





- 1 To start to write a to-do note, press any key ( - ). The editor opens and the cursor blinks after the letters you have keyed in.
- 2 Write the task in the *Subject* field. Press  to add special characters.
 - To set the due date for the task, scroll to the *Due date* field and key in a date.
 - To set a priority for the to-do note, scroll to the *Priority* field and press .



3 To save the to-do note, press **Done**.

Note: If you remove all characters and press **Done**, the previously saved note will be deleted.

- To open a to-do note, scroll to it and press .
- To delete a to-do note, scroll to it and select **Options**→ *Delete* or press .
- To mark a to-do note as completed, scroll to it and select **Options**→ *Mark as done*.
- To restore a to-do note, select **Options** → *Mark as not done*.

Priority icons	
	<i>High</i>
	<i>Low</i>
no icon	<i>Normal</i>
Status icons	
	task completed
	not completed



11 Extras

• CALCULATOR

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Go to **Menu** → **Extras** → **Calculator**

Options in Calculator are: *Last result*, *Memory*, *Clearscreen*, *Help*, and *Exit*.

- 1 Enter the first number of your calculation. Press to erase a mistake in the number.
- 2 Scroll to a function and press to select it.
Use to add, to subtract, to multiply, or to divide.
- 3 Enter the second number.
- 4 To execute the calculation, scroll to and press .

Note: The Calculator has limited accuracy and rounding errors may occur, especially in long divisions.

- To add a decimal, press .
- Press and hold to clear the result of the previous calculation.
- Use and to view previous calculations and move in the sheet.
- Select to save a number to the memory, indicated by **M**. To retrieve the number from the memory, select .
- To retrieve the result of the last calculation, select **Options** → *Last result*.

Tip: Press repeatedly to scroll the functions. You can see the selection change between the functions.













• COMPOSER

Go to **Menu**→ **Extras**→ **Composer**.

Options in the Composer main view are: *Open, New tone, Delete, Mark/Unmark, Rename, Duplicate, Help*, and *Exit*.

Composer allows you to create your own, customized ringing tones. Note that it is not possible to edit a default ringing tone.
















Note: You will not be able to *Send, Duplicate* or modify a purchases ringing tone. For more information see, **CROSS REF**.

- 1 Select **Options**→ *New tone* to open the editor and to start composing.
 - Use the keys to add notes and rests. See the table.
Or, select **Options**→ *Insert symbol* to open a list of notes and rests.
The default duration for a note is 1/4.
 - To listen to the tone, press  or select **Options**→ *Play*. The playback is always started from the beginning of the tone. To stop playing, press **Stop**.
 - To adjust the volume while a tone is playing, press  to increase or press  to decrease it. Or, select **Options**→ *Volume* before you start to play the tone.
 - To adjust the tempo, select **Options**→ *Tempo*. To increase or decrease the tempo gradually, press and hold  or , respectively. Tempo is measured in beats per minute. The maximum is 250 beats, the default tempo for a new tone is 160 beats, and the minimum is 50 beats.
 - To apply different playing styles, select **Options**→ *Style*→ *Legato* – played in a smooth and even manner or *Staccato* – notes are played separately to produce short sharp sounds.
 - To select many notes or rests at the same time, press and hold  and press and hold  or  at the same time.
 - To move note(s) up or down on the staff by a half step, scroll to the note and press  or .

- For example, press and hold  together with  to produce C#.

2 Select **Back** to save.

Options when composing are: *Play, Insert symbol, Style, Tempo, Volume, Help* and *Exit*.

Key	Note	Key and function
	c	 Shortens the duration of the selected note(s)/rest(s) in steps.
	d	 Lengthens the duration of the selected note(s)/rest(s) in steps.
	e	 Inserts a rest.
	f	Press  to open a list of notes and rests.
	g	 Switches octaves, all selected note(s) or rest(s) is/are moved to the next octave.
	a	 Deletes selected note(s).
	b	A long press of keys  -  produces a lengthened (dotted) note or rest or shortens a lengthened note.



• CONVERTER





In Converter, you can convert measures such as *Length* from one unit (*Yards*) to another (*Meters*).

Go to **Menu** → *Extras* → **Converter**.

Options in Converter are: *Select unit / Change currency, Conversion type, Currency rates, Help*, and *Exit*.

Note: The Converter has limited accuracy and rounding errors may occur.

Convert units

- 1 Scroll to the *Type* field and press  to open a list of measures. Scroll to the measure you want to use and press **OK**.
- 2 Scroll to the first *Unit* field and press  to open a list of available units. Select the unit **from** which you want to convert and press **OK**. Scroll to the next *Unit* field and select the unit **to** which you want to convert.
- 3 Scroll to the first *Amount* field and key in the value you want to convert. The other *Amount* field changes automatically to show the converted value.
Press  to add a decimal and press  for the +, - (for temperature), and E (exponent) symbols.

Note: The conversion order changes if you write a value in the second *Amount* field. The result is shown in the first *Amount* field.

Tip: To rename a currency, go to the Currency rates view, scroll to the currency, and select **Options**→ *Rename currency*.

Set a base currency and exchange rates

Before you can make currency conversions, you need to choose a base currency (usually your domestic currency) and add exchange rates.

Note: The rate of the base currency is always 1. The base currency determines the conversion rates of the other currencies.



Example: If you set the United States Dollar (USD) as the base currency, a Euro is *xxxxxxx*. Thus, you would write *xxxxxx* as the exchange rate for the Euro.

- 1 Select *Currency* as the measure type and select **Options**→ *Currency rates*. A list of currencies opens and you can see the current base currency at the top.
 - 2 To change the base currency, scroll to the currency (usually your domestic currency), and select **Options**→ *Set as base curr.*
- Important:** When you change the base currency, all previously set exchange rates are set to **0** and you need to key in new rates.




- 3 Add exchange rates (see example), scroll to the currency, and key in a new rate, that is, how many units of the currency equal one unit of the base currency you have selected.
- 4 After you have inserted all the needed exchange rates, you can make currency conversions, see "Convert units" on page 136.



• NOTES

Go to **Menu** → **Extras** → **Notes**.

You can link notes to Favorites and send them to other devices. Plain text files (TXT format) you receive can be saved to Notes.

Press any key press ( - ) to start to write. Press  to clear letters. Press **Done** to save.



• CLOCK


Go to **Menu** → **Extras** → **Clock**.

Options in Clock are: *Set alarm*, *Reset alarm*, *Remove alarm*, *Settings*, *Help*, and *Exit*.

Change clock settings

To change the time or date, select **Options** → *Settings* in Clock. To change the clock shown in standby mode, scroll down in the *Date and time* settings and select *Clock type* → *Analog* or *Digital*.

Set an alarm

- 1 To set a new alarm, select **Options** → *Set alarm*.
- 2 Enter the alarm time and press **OK**. When the alarm is active, the  indicator is shown.

The alarm clock works even if the phone is switched off.

To cancel an alarm, go to clock and select **Options** → *Remove alarm*.

TURN OFF THE ALARM

- Press **Stop** to turn off the alarm.

- When the alarm tone sounds, press any key or **Snooze** to stop the alarm for five minutes, after which it will resume. You can do this a maximum of five times.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls. Press **No** to switch off the phone or **Yes** to make and receive calls.

Note: Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.










• RECORDER

Go to **Menu**→ **Extras**→ **Recorder**.

Options in Recorder are: *Open, Record sound clip, Delete, Move to phone mem, Move to mem. card, Rename sound clip, Send, Add to Favorites, Help, and Exit.*

The voice recorder allows you to record telephone conversations and voice memos. If you are recording a telephone conversation, both parties will hear a tone every five seconds during recording.


Note: Obey all local laws governing recording of calls. Do not use this feature illegally.

Select **Options**→ *Record sound clip* and scroll to a function and press  to select it. Use:  - to record,  - to pause,  - to stop,  - to fast forward,  - to fast rewind, or  - to play an opened sound file.

Note: Recorder cannot be used when a data call or a GPRS connection is active.




12 Services (Internet)

Go to **Menu**→**Services** or press and hold  in standby mode.

Note: Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Various service providers on the Internet maintain pages specifically designed for mobile phones, offering services such as news, weather reports, banking, travel information, entertainment, and games.

These pages use the Hypertext Markup Language (HTML) and the Wireless Markup Language (WML) giving you the capability to view any content written for the mobile phone.

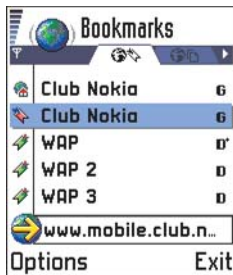

Note: Check the availability of services, pricing, and tariffs with your network operator and/or service provider. Service providers will also give you instructions on how to use their services.

• BASIC STEPS FOR ACCESSING

- Save the settings that are needed to access the web service that you want to use. See the next section "Set up the phone for the mobile browser" on page 140.
- Make a connection to the service. See p. 140.
- Start browsing the web pages. See p. 143.
- End the connection to the service. See p. 144.

• SET UP THE PHONE FOR THE MOBILE BROWSER

Receive settings in a smart message

You may receive service settings in a special short message, a so-called smart message, from the network operator or service provider that offers the WAP service. See "Receive smart messages" on page 104. For more information, contact your network operator or service provider, or visit Club Nokia's Web site (www.club.nokia.com).

Tip: Settings may be available, for example, on the Web site of a network operator or service provider.

Key in the settings manually




Follow the instructions given to you by your service provider.


- 1 Go to **Settings**→ *Connection settings*→ *Access points* and define the settings for an access point. See "Connection settings" on page 47.
- 2 Go to **Services**→ **Options**→ *Add bookmark*. Write a name for the bookmark and the address of the web page defined for the current access point.


Make a connection

Once you have stored all the required connection settings, you can access web pages.


There are three different ways to access web pages.

- Select the homepage () of your service provider,
- Select a bookmark from the Bookmarks view, or
- Press the keys  -  to start to write the address of a web service. The Go to field at the bottom of the display is immediately activated and you can continue writing the address there.

After you have selected a page or written the address, press  to start to download the page. See also "Data connection indicators" on page 21.

Tip: To access the Bookmarks view while browsing, press . To return to the browser view again, select **Options**→ *Back to page*.

Connection security

If the security indicator  is displayed during a web connection, the data transmission between the phone and the web gateway or web server is encrypted and secure.

Note: The security icon does not indicate that data transmission between the gateway and the content server (the place where the requested resource is stored) is secure. It is up to the service provider to secure data transmission between the gateway and the content server.

• VIEW BOOKMARKS

Options in the Bookmarks view (selection on a bookmark or folder) are: *Open, Download, Back to page, Send, Go to URL address | Find bookmark, Add bookmark, Edit, Delete, Read service msgs., Disconnect, Move to folder, New folder, Rename, Clear cache, Details, Add to Favorites, Settings, Help, and Exit.*



Glossary: A bookmark consists of an Internet address (mandatory), bookmark title, WAP access point, and if the service requires, a user name and password.

Note: Your phone may have some pre-installed bookmarks for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any site.

In the Bookmarks view, you can see bookmarks pointing to different kinds of web pages. Bookmarks are indicated by the following icons:



- The starting page defined for the web access point. If you use another web access point for browsing, the starting page is changed accordingly.





- The last visited page. When the phone is disconnected from the service, the address of the last visited page is kept in memory until a new page is visited during the next connection.



- A bookmark showing the title.

When you scroll through bookmarks, you can see the address of the highlighted bookmark in the Go to field at the bottom of the display.

Add bookmarks manually

- 1 In the Bookmarks view, select **Options**→ *Add bookmark*.
- 2 Start to fill in the fields. Only the address must be defined. The default access point is assigned to the bookmark if no other one is selected. Press  to enter special characters such as /, ., :, and @. Press  to clear characters.
- 3 Select **Options**→ *Save* to save the bookmark.



Send bookmarks

To send a bookmark, scroll to it and select **Options**→ *Send*→ *Via short message*.

View saved pages



In the saved pages view, you can see saved web pages from previous sessions. Pages you could save are ones containing information which doesn't change very often, for example, a train timetable. Saved pages are indicated by the following icon:



- The saved web page.




In the saved pages view you can also create folders to store your saved web pages.

Folders are indicated by the following icon:



- Folder containing saved web pages.

If you have a memory card, you can save web pages on to it instead of the phone's memory.

- To save a page, while browsing select **Options**→*Save page*. You have an option to save either in the phone's memory or on the memory card.
- To open the Saved pages view, press  in the Bookmarks view. In the Saved pages view, press  to open a saved page. Pages stored on the memory card have the  indicator showing. If the memory card is locked or is not inserted, you will only see pages which are saved in the phone's memory.

If you want to start a connection to the web service and to retrieve the page again, select **Options**→*Reload*. You can also arrange the pages into folders.

Note: The phone stays online after you reload the page.






Options in the Saved pages view are: *Open, Back to page, Reload, Remove, Read service msgs., Disconnect, Move to folder, New folder, Mark/Unmark, Rename, Clear cache, Details, Add to Favorites, Settings, Help* and *Exit*




Browse the web pages

On a browser page, new links appear underlined in blue and previously visited links in purple. Images that act as links have a blue border around them.

Options when browsing are: *Open/Use wallet* (option available if you have any personal information stored), *Close wallet* (option available if you have opened the *Use wallet* option), *Service options, Bookmarks, History, Go to URL address, View images, Read service msgs., Save as bookmark, Send bookmark, Reload, Disconnect, Show images, Clear cache, Save page, Find, Details, Session, Security, Settings, Help*, and *Exit*.


KEYS AND COMMANDS USED IN BROWSING

- To open a link, press .
- To scroll the view, use the scroll key.
- To enter letters and numbers in a field, press the keys  - . Press  to enter special characters such as /, ., :, and @. Press  to clear characters.

- To go to the previous page while browsing, press **Back**. If **Back** is not available, select **Options**→ *History* to view a chronological list of the pages you have visited during a browsing session. The history list is cleared each time a session is closed.
- To check boxes and make selections, press .
- To open the contents of a cell in a table, press .
- To retrieve the latest content from the server, select **Options**→ *Reload*.
- To open a sublist of commands or actions for the currently open web page, select **Options**→ *Service options*.
- Press  to disconnect from a web service and to quit browsing.

VIEW NEW SERVICE MESSAGES WHILE BROWSING

To download and view new service messages while browsing:

- 1 Select **Options**→ *Read service msgs.* (shown only if there are new messages).
- 2 Scroll to the message and press  to download and open it.

For more information about service messages, see **CROSS REF**.



SAVE BOOKMARKS

- To save a bookmark while browsing, select **Options**→ *Save as bookmark*.
- To save a bookmark received in a smart message, open the message in the Inbox in Messaging and select **Options**→ *Save to bookmarks*. See also **CROSS REF**

• END A CONNECTION

- Select **Options**→ *Disconnect*, or

- Press and hold  to quit browsing and to return to standby mode.

Empty the cache


The information or services you have accessed are stored in the cache memory of the phone.

Note: If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use. To empty the cache, select **Options**→ *Clear cache*.



Glossary: A cache is a buffer memory that is used to store data temporarily.

• BROWSER SETTINGS

- *Default access point* – If you want to change the default access point, press  to open a list of available access points. The current default access point is highlighted. For more information, see “Connection settings” on page 47.
- *Show images* – Choose if you want to view pictures when you are browsing. If you choose *No*, you can later load images during browsing by selecting **Options**→ *Show images*.
- *Cookies – Allow / Reject*. You can enable or disable the receiving and sending of cookies.
- *Conf. DTMF sending – Always / Confirm once*. The browser supports functions you can access while browsing. You can: make a voice call while you are on a web page, send DTMF tones while a voice call is in progress, save in Contacts a name and phone number from a web page. Choose whether you want to confirm before the phone sends DTMF tones during a voice call. See also ‘DTMF tones’, p. 34.
- *Save receipt* – save details of a digitally signed document.

Downloading

You can download items such as ringing tone, images, operator logos and video clips through the mobile browser. These items can be provided free or for a price.

Once downloaded, items are handled by the respective applications on your phone, for example a downloaded photo will be saved in Images.

DOWNLOADING DIRECTLY FROM THE WEB PAGE

To download the item directly from a web page scroll to the link and select **Options**→ *Open*.

DIGITAL RIGHTS

When you decide to buy an item, for example a ringing tone, you can listen to it first and then if you like it, you can buy it. A feature of digital rights is that once you buy an item, you are the sole owner of that item and you can't send it to someone else.

Note: Restrictions on distribution of bought items are listed in this guide in sections describing the items. For example, restrictions on distribution of ringing tones are listed in the **Composer** section, about photos in the **Images** section.

To download the item:

- Scroll to the link and select **Options**→ *Open*.
You are given the choice to preview the item or Buy.
- If you are previewing a ringing tone for example, the selected ringing tone will open in **Composer** ready for playing.
- Once the preview is over, select **Buy** if you want to buy the item.

CHECK CONTENT AND THEN DOWNLOAD

You can see details about an item before you download it. Details about and item may include the price, brief description and size.

Note: Check with your service provider to see if they offer this service.

- Scroll to the link and select **Options**→ *Open*
Details about the item are displayed on you phone.
- If you want to continue with the downloading, press *Accept* or if you want to cancel the download, press *Cancel*.

13 Tools

Note: Your phone must be switched on to use the functions in the Tools folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

For further information on **Call forward** or **Voice mailbox**, see "Settings for call forwarding" on page 34 and "Change the voice mailbox number" on page 30.





• MANAGER – INSTALL APPLICATIONS AND SOFTWARE

Go to **Menu**→ **Tools**→ **Manager**

Options in the Manager main view are: *View details*, *View certificate*, *Install*, *Remove*, *View log*, *Send log*, *Memory details*, *Help* and *Exit*.

In Manager you can install new applications and software packages, and remove applications from your phone. You can also check the memory consumption.

When you open Manager, you can see a list of:

- installation packages that have been saved to Manager,
- partially installed applications (indicated by ) , and
- fully installed applications that you can remove (indicated by ).

Note: In Manager, you can only use device software installation files with an extension .SIS.

- Scroll to an installation file and select **Options**→ *View details* to view the *Name*, *Version*, *Type*, *Size*, *Supplier*, and *Status* of the software package.
- Scroll to a software package and select **Options**→ *View certificate* to display the security certificate details of a software package. See "Certif. management" on page 57.

Tip: Only install software from sources that offer adequate protection against viruses and other harmful software. To help you, the software installation system uses digital signatures and certificates on software packages. Do not install the application if Installer gives a security warning during installation.

Install software

You can install applications that are specifically intended for the Nokia 3650 or suitable for the Symbian operating system. A software package is usually one large compressed file containing many component files.

Note: If you install a program that is not intended specifically for the Nokia 3650, it may function and look very different from the usual Nokia 3650 applications.

Important: If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full back-up copy of the removed software package. To restore the original application, first remove the application and then install the application again from the original installation file or the back-up copy.


Tip: To install Java™ applications (file extension .JAD or .JAR), go to Applications. For further information, see "Applications (Java™)" on page 150.


Tip: Select **Options** → [View log](#) to see what software packages have been installed or removed and when.

- 1 Installation packages may be transferred to your phone from a computer, downloaded during WAP browsing, or sent to you in a multimedia message, as an e-mail attachment, via Bluetooth, or via infrared. If you are using PC Suite for Nokia 3650 to transfer the file, place it in the **c:\nokia\installs** folder in your phone.
- 2 Open Manager, scroll to the installation package, and select **Options** → [Install](#) to start the installation.

Alternatively, search the phone memory or the memory card for the



installation file, select the file, and press  to start the installation.

Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation.

If you are installing software without a digital signature or a certificate, the phone warns you of the risks of installing software. Continue installation only if you are absolutely sure of the origin and contents of the software package.

During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out and you are given options whether to continue or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

Tip: To send your installation log to a help desk so that they can see what has been installed or removed, select **Options**→ *Send log*→ *Via short message* or *Via e-mail* (available only if the correct e-mail settings are in place).

Remove software

- 1 To remove a software package, scroll to it and select **Options**→ *Remove*.
- 2 Press **Yes** to confirm the removal.

Important: If you remove software, you can only re-install it if you have the original software package or a full back-up of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software. If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

View memory consumption

To open the memory view select **Options**→ *Memory details*.

Note: If you have a memory card installed on your phone, you will have a choice of two memory views, one for the phone or *Phone memory* and one for the *Memory card*. If not, you will only have the *Phone memory* view.

When you open either of the memory views, the phone calculates the amount of free memory for storing data and installing new software. In the memory views, you can view the memory consumption of the different data groups: *Calendar, Contacts, Documents, Messages, Images, Sound files, Video clips, Applications, Mem. in use, Free memory*.

Tip: If the phone memory is getting low, remove some documents, or move them to the memory card. See also page 178.



• APPLICATIONS (JAVA™)

Go to **Menu**→ **Tools**→ **Applications**

Options in the Applications main view are: *Open, View details, Settings, Remove, Go to URL address, Update, Help* and *Exit*.

In the Applications main view you can open installed Java applications or remove them. In the Install view you can install new Java applications (file extensions .JAD or .JAR).

Note: Your phone supports J2ME™ Java applications. Do not download PersonalJava™ applications to your phone as they cannot be installed.

When you open Applications, you can see a list of Java applications that have been installed to your phone.

- Scroll to an application and select **Options**→ *View details* to view:
 - *Status* – *Installed, Running, or Downloaded* (shown only in Install view),
 - *Version* – the application version number,
 - *Supplier* – the supplier or manufacturer of the application,
 - *Size* – the size of the application file in kilobytes,
 - *Type* – a brief description of the application,


- [URL](#) - an address of an information page on the Internet, and
 - [Data](#) - the size of application data such as high scores, in kilobytes.
- Scroll to an application and select **Options**→ [Go to URL address](#) to start a data connection and to view extra information about the application.
 - Scroll to an application and select **Options**→ [Update](#) to start a data connection and to check if there is an update available for the application.


Install a Java application

Options in the Install view are: [Install](#), [View details](#), [Delete](#), [Help](#) and [Exit](#).

Installation files may be transferred to your phone from a computer, downloaded during WAP browsing, or sent to you in a multimedia message, as an e-mail attachment, via Bluetooth, or via infrared. If you are using PC Suite for Nokia 3650 to transfer the file, place it in the **c:\nokia\installs** folder in your phone.


Important: Only install software from sources that offer adequate protection against viruses and other harmful software.

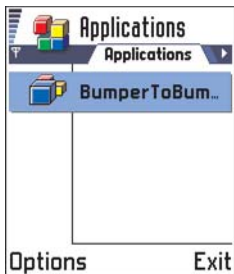


- 1 In the Applications main view, to view the installation packages, press  to open the [Downloaded](#) view.

Note: In the Install view, you can only install Java software installation files with the extension .JAD or .JAR.

- 2 To install an application, scroll to an installation file and select **Options**→ [Install](#).

Alternatively, search the phone memory for the installation file, select the file, and press  to start the installation.



Example: If you have received the installation file as an e-mail attachment, go to your mailbox, open the e-mail, open the Attachments view, scroll to the installation file, and press  to start the installation.

- 3 Press **Yes** to confirm the installation.

The .JAR file is required for installation. If it is missing, the phone may ask you to download it. If there is no access point defined for Applications, you will be asked to select one. When you are downloading the JAR file, you may need to enter a user name and password to access the server. You obtain these from the supplier or manufacturer of the application.


During installation, the phone checks the integrity of the package to be installed. The phone shows information about the checks being carried out and you are given options whether to continue with or cancel the installation. Once the phone has checked the integrity of the software package, the application is installed on your phone.

- 4 The phone informs you when installation is complete.

To open the Java application after installation, you must go to the Applications main view.

Tip: When you are browsing WAP pages, you can download an installation file and install it immediately. Note, however, that the WAP connection is left running in the background during installation.

OPEN A JAVA APPLICATION

Scroll to an application in the Applications main view and press  to open it.

UNINSTALL A JAVA APPLICATION

Select the application in the Applications main view and select **Options**→ *Remove*.

Java application settings

Select *Settings*→ *Default access point* - to define a default access point for downloading missing application components. For more information on creating access points, see "Access points" on page 50.

Select an application and select *Settings* and then select:

- *Access point* - Select an access point to be used by the application for downloading extra data.
- *Network connection* - Some Java applications may require a data connection to be made to a defined access point. If no access point has been selected, you will be asked to select one. The options are:
 - Allowed* - The connection is created immediately without a notification.
 - Ask first* - You will be asked before the application makes the connection.
 - Not allowed* - Connections are not allowed.

14 Connectivity

Note: Your phone must be switched on to use the functions in the **Connectivity** folder. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can transfer data from your phone to another compatible device, for example, a phone or a computer, via Bluetooth or infrared.



• BLUETOOTH CONNECTION

Go to **Menu** → **Connectivity** → **Bluetooth**


Bluetooth enables cost-free wireless connections between electronic devices within a maximum range of 10 meters. A Bluetooth connection can be used to send images, texts, business cards, calendar notes, or to connect wirelessly to Bluetooth enabled devices such as computers.

Since Bluetooth devices communicate using radio waves, your phone and the other Bluetooth device do not need to be in direct line-of-sight.

The two devices only need to be within a maximum of 10 meters of each other, although the connection can be subject to interference from obstructions such as walls or from other electronic devices.

Using Bluetooth consumes the battery and the phone's operating time will be reduced. Take this into account when performing other operations with your phone.

There may be restrictions on using Bluetooth devices. Check with your local authorities.

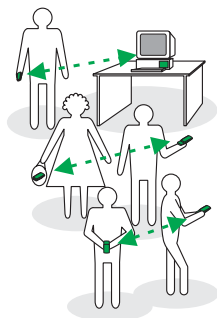


Activate the Bluetooth application for the first time

When you activate the Bluetooth application for the first time, you are asked to give a Bluetooth name to your phone.


Note: After you have set Bluetooth to be active and changed *My phone's visibility* to *All*, your phone and this name can be seen by other Bluetooth device users.

Write a name (max. 30 letters) or use the default name 'Nokia 7650'. If you send data via Bluetooth before you have given an individual Bluetooth name to your phone, the default name will be used.

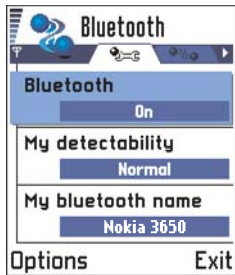

Tip: To send text via Bluetooth (instead of short messages), go to Notes, write the text, and select **Options**→ *Send*→ *via Bluetooth*.

Bluetooth settings

To modify Bluetooth settings, scroll to the setting you want to change and press .

- **Bluetooth** - Select *On* if you want to use Bluetooth. If you set Bluetooth *Off* all active Bluetooth connections are ended and Bluetooth cannot be used for sending or receiving data.
- **My phone's visibility** - If you select *Shown to all* your phone can be found by other Bluetooth devices during device search. If you select *Hidden* your phone cannot be found by other devices during device search.
- **My Bluetooth name** - Define a Bluetooth name for your phone. After you have set Bluetooth to be active and changed *My phone's visibility* to *All*, this name can be seen by other Bluetooth device users.

Tip: When searching for devices, some Bluetooth devices may show only the unique Bluetooth addresses (device addresses). To find out what the unique Bluetooth address of your phone is, enter the code ***#2820#** in standby mode.


Send data via Bluetooth

Note: There can be only one active Bluetooth connection at a time.

- 1 Open an application where the item you wish to send is stored. For example, to send a photo to another device, open the Images application.

- 2 Scroll to the item you want to send, for example, a photo and select **Options**→**Send**→ **Via Bluetooth**.



- 3 The phone starts to search for devices within range. Bluetooth enabled devices that are within range start to appear on the display one by one. You can see a device icon, the device's Bluetooth name, the device type, or a short name. Paired devices are shown with .

Note: If you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**. If you switch off the phone, the list of devices is cleared and the device search needs to be started again before sending data.

- To interrupt the search, press **Stop**. The device list freezes and you can start to form a connection to one of the devices already found.
- 4 Scroll to the device you want to connect with and press **Select**. The item you are sending is copied to Outbox and the note **Connecting** is shown.
 - 5 Pairing (if not required by the other device, see step 6).







Glossary: Pairing means authentication. The users of the Bluetooth enabled devices should agree together what the passcode is and use the same passcode for both devices in order to pair them. Devices that do not have a user interface have a factory set passcode.

- If the other device requires pairing before data can be transmitted, a tone sounds and you are asked to enter a passcode.
- Create your own passcode (1-16 characters long, numeric) and agree with the owner of the other Bluetooth device to use the same code. This passcode is used only once and you do not have to memorize it.
- After pairing, the device is saved to the Paired devices view.




6 When the connection has been successfully established, the note *Sending data* is shown.

Note: Data received via Bluetooth can be found in the Inbox folder in Messaging. See p. 101 for further information.

Note: If sending fails, the message or data will be deleted. The Drafts folder in Messaging does not store messages sent via Bluetooth.




Icons for different Bluetooth devices	
	Computer
	Phone
	Other
	Unknown

Check the status of the Bluetooth connection

- When  is shown in standby mode, Bluetooth is active.
- When  is blinking, your phone is trying to connect to the other device.
- When  is shown continuously, the Bluetooth connection is active.

Paired devices view

Options in the paired devices view are: *New paired device, Connect / Disconnect, Assign short name, Delete, Delete all, Set as authorized / Set as unauthorized, Help, and Exit.*


Pairing with a device makes device searches easier and quicker. Paired devices are easier to recognize, they are indicated by  in the search result list. In the Bluetooth main view, press  to open a list of paired devices (.

PAIR WITH A DEVICE

- 1 Select **Options**→ *New paired device* in the Paired devices view. The phone starts to search for devices within range. Or, if you have searched for Bluetooth devices earlier, a list of the devices that were found previously is shown first. To start a new search, select **More devices**.
- 2 Scroll to the device you want to pair with and press **Select**.
- 3 Exchange passcodes, see step 5 (Pairing) in the previous section. The device is added to the Paired devices list.

Tip: You can also play phone-to-phone games via Bluetooth.

CANCEL PAIRING

- In the Paired devices view, scroll to the device whose pairing you want to cancel and press  or select **Options**→ *Delete*. The device is removed from the Paired devices list and the pairing is cancelled.
- If you want to cancel all pairings, select **Options**→ *Delete all*.

Note: If you are currently connected to a device and delete the pairing with that device, pairing is removed immediately but the connection will remain active.

ASSIGN SHORT NAMES FOR PAIRED DEVICES

You can define a short name (nickname, alias), to help you recognize a certain device. This name is stored in the phone memory and cannot be seen by other Bluetooth device users.



Example: Give a short name to your friend's Bluetooth enabled device or to your own computer to be able to recognize it more easily.


To assign a short name, scroll to the device and select **Options**→ *Assign short name*. Write the short name and press **OK**.


Note: Choose a name which is easy to remember and recognize. Later when you are searching for devices or a device is requesting a connection, the name you have chosen will be used to identify the device.

SET A DEVICE TO BE AUTHORIZED OR UNAUTHORIZED

After you have paired with a device, you can set it to be authorized or unauthorized:



Unauthorized (default) - Connection requests from this device need to be accepted separately every time.

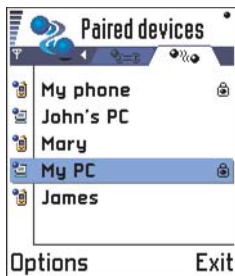Authorized - Connections between your phone and this device can be made without your knowledge. No separate acceptance or authorization is needed. Use this status for your own devices, for example, your PC, or devices that belong to someone you trust. The icon  is added next to authorized devices in the Paired devices view.



In the Paired devices view, scroll to the device and select **Options**→ *Set as authorized* / *Set as unauthorized*.

Receive data via Bluetooth

When you receive data via Bluetooth, a tone sounds and you are asked if you want to accept the Bluetooth message. If you accept,  is shown and the item is placed in the Inbox folder in Messaging. Bluetooth messages are indicated by . See p. 101 for further information.

Disconnect Bluetooth

A Bluetooth connection is disconnected automatically after sending or receiving data.


• INFRARED CONNECTION

To start infrared, go to **Menu**→ **Connectivity**→ **Infrared**


Via infrared, you can send or receive data such as business cards and calendar notes to and from a compatible phone or data device.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a **Class 1 Laser product**.

Send and receive data via infrared

Note: All items which are received via infrared are placed in the Inbox folder in Messaging. New infrared messages are indicated by . See p. 101 for further information.

- 1 Make sure that the infrared ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices is one meter at most. To find the infrared port, see the picture of the different keys in the General information section of this guide.
- 2 The user of the receiving device activates the infrared port.

To activate the infrared port of your phone to receive data via infrared, go to **Menu**→ **Connectivity**→ **Infrared** and press .

- 3 The user of the sending device selects the desired infrared function to start data transfer.

To send data via infrared, select **Options**→ **Send**→ *via infrared* in an application.

If data transfer is not started within two minutes after the activation of the infrared port, the connection is cancelled and must be started again.


Tip: You can also play phone-to-phone games via infrared.




Example: To send a contact card via infrared: (1) Ask the receiver to activate the infrared port in his/her device. (2) Go to Contacts, scroll to a card and select **Options**→ **Send**→ *via infrared*.

Note: Windows 2000: To be able to use infrared to transfer files between your Nokia 3650 and a compatible computer, go to "Control Panel" and select "Wireless Link". In the "Wireless Link" "File Transfer" tab check the "Allow others" to send files to your computer using infrared.

Checking the status of the infrared connection

- When  blinks, your phone is trying to connect to the other device or a connection has been lost.

- When  is shown continuously, the infrared connection is active and your phone is ready to send and receive data via its infrared port.

• CONNECT YOUR PHONE TO A COMPUTER

For further information on how to make a connection to a compatible computer via infrared or Bluetooth and how to install the PC Suite for Nokia 3650, see the **Installation Guide for PC Suite** on the CD-ROM in the 'Software for PC' section. For further information on how to use the PC Suite for Nokia 3650, see the PC suite **online help**.

Use the CD-ROM

The CD-ROM should launch itself after you have inserted it into the CD-ROM drive of your compatible PC. If not, proceed as follows:

- 1 Click the Window **Start** button and select **Programs**→ *Windows Explorer*.
- 2 On the CD-ROM drive, locate a file called **Nokia3650.exe** and double-click it. The CD-ROM interface opens.
- 3 You can find PC Suite for Nokia 3650 in the 'Software for PC' section. Double-click 'PC Suite for Nokia 3650'. The installation wizard will guide you through the installation process.



• USE YOUR PHONE AS A MODEM TO CONNECT TO THE INTERNET OR TO SEND OR RECEIVE FAXES

Detailed installation instructions can be found in **Quick guide for Modem Options for Nokia 3650** on the CD-ROM supplied with the phone.

15 Reference information



• BATTERY STATEMENTS

Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer.

Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Remove the battery only when the phone is switched off.

• **USE PROPER CARE AND MAINTENANCE**

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

• UNDERSTAND IMPORTANT SAFETY INFORMATION

Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

PACEMAKERS

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed

control systems, air bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices so require.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.

Emergency calls


Important: This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore you should never rely solely upon any wireless phone for essential communications (for example, medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1 If the phone is not on, switch it on. Check for adequate signal strength.

Some networks may require that a valid SIM card is properly inserted in the phone.

- 2 Press  as many times as needed (e.g. to exit a call, to exit a

menu, etc.) to clear the display and ready the phone for calls.

- 3 Key in the emergency number for your present location (e.g. 911 or other official emergency number). Emergency numbers vary by location.
- 4 Press the **xxx** key

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident - do not cut off the call until given permission to do so.

PHONES WITH EOTD/E911

This phone supports FCC mandated emergency location service. This feature may not be supported by emergency response numbers or wireless phone networks in all areas. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

Certification information (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (for example, at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is ____ W/kg, and when worn on the body, as described in this user guide, is ____ W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of **<http://www.fcc.gov/oet/fccid>** after searching on FCC ID _____.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with the Nokia accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at www.nokia.com.

• **USE ACCESSORIES SAFELY**

A few practical rules for accessory operation:

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.
- Use only batteries, chargers, and accessories that have been approved by the phone manufacturer. The use of any other types could invalidate any approval or warranty applying to the phone and could be dangerous.

• **ACCESSORIES**

Add accessory information for your phone here.

• GLOSSARY!

Business card	A business card is the same as an entry in the phone book. It may contain a name, phone number, and text entry. It can also be sent to other devices.
Call forwarding	A network services feature you use to forward incoming calls to another number.
Call lists	A list used to track numbers for incoming, outgoing, or missed calls.
Call log	A log that registers information about calls you make and receive.
Call timers	Timers used to track the amount of time you spend on calls.
Call waiting	A network services feature that enables your phone to beep while you are in the middle of a call. The beep lets you know that someone else is calling you.
Electronic serial number (ESN)	The identification number that is assigned to the phone. This number is located under the battery.
In-call options	Features available for use while you are in a call.
Keyguard	Locks the keypad to prevent accidental key presses.
Keypad tones	The tone you hear when you press a key.
Menu	A list of choices you can make to change settings on your phone or use various phone features.
Predictive text	A method of entering information in your phone that uses a dictionary to predict, or guess, what you are writing.

Profile	A group of settings you can use to customize the way your phone works.
Quick save	A fast method for saving a number.
Ringing tone	The sound your phone makes when you receive a call. Ringing tones can be ringing sounds or short tunes.
Scroll bar	A bar that appears on the right side of the screen when you scroll through the main menus.
SMS	The quick way to say short message service.
Start screen	Your phone's idle screen.
Voice mail	A network services feature that enables people who call and miss you to leave a voice message on your phone.
Warning tones	Sounds your phone makes during error conditions, during confirmations, when the battery is low, and when you need to recharge the battery.

• TECHNICAL INFORMATION

Feature	Specification
Weight	140 g with 850 mAh BL-5C battery
Size	139 cc
Frequency Range	Lowband # - # MHz (TX) # - # MHz (RX) Highband # - # MHz (TX) # - # MHz (RX)
Transmitter Output Power	Up to #mW
Battery Voltage	# V nominal
Operating Temperature	#°F to + #°F (#°C to + #°C)
Number of Channels	# lowband # highband
Phone numbers	#
Memory Locations	#

• TROUBLESHOOTING

If you experience problems with your phone, Club Nokia Careline answers questions and offers instructions over the phone. For more information on the Club Nokia Careline see the Club Nokia invitation in this User's Guide or go to www.club.nokia.com.

Memory low

When following notes are shown, the phone memory is low and you must start to delete some data: *Not enough memory to perform operation. Delete some data first.* or *Memory low. Delete some data.*

In the event follow the instructions below:

- To view what kind of data you have and how much memory the different data groups consume, go to **Installer** and select **Options**→*Memory details*.
- To avoid memory getting low, you should regularly delete, or transfer to your memory card:
 - messages from the Inbox, Drafts, and Sent folders in Messaging,
 - retrieved e-mail messages from the phone memory,
 - saved WAP pages, and
 - images and photos in Images.
- If you want to delete contact information, calendar notes, call timers, call cost timers, game scores, or any other data, go to the respective application to remove the data.

Clearing calendar memory - To remove more than one event at a time, go to the Month view and select **Options**→ *Delete*→ and delete either

- *Before date* - to delete all calendar notes which take place before a certain date. Enter the date before which all calendar notes will be deleted, or
- *All entries* - to delete all calendar notes.

Erasing log information - To erase all the log contents, Recent calls log, and Messaging delivery reports permanently, go to Logs and select **Options**→ *Clear log* or go to *Settings*→ *Log duration*→ *No log*.

Different ways to store data:

- use PC Suite for Nokia 3650 to take a backup copy of all data to your computer, see p. 160,
- send images to the Club Nokia Photo Zone, see p. 80,
- send images to your e-mail address and then save the images to your computer, or
- send data via infrared or Bluetooth to another device.

• FREQUENTLY ASKED QUESTIONS (FAQ)

Phone display

- Q. Why do missing, discolored, or bright dots appear on the screen every time I turn on my phone?**
- A. This is an intrinsic characteristic of the active matrix display. Your phone's display contains multiple switching elements to control the pixels. A small number of missing, discolored, or bright dots on the screen might exist.

Camera

- Q. Why does the image appear dark when I am taking a picture with the Camera or viewing images?**
- A. The display contrast setting affects the appearance of images. Check the display contrast setting and adjust it to lighter. Go to **Settings**→ *Phone settings*→ *Display*→ *Contrast*.
- Q. Why do images look smudgy?**
- A. Check that the camera lens protection window is clean. To clean the window follow the instructions in "Use proper care and maintenance" on page 166.

Bluetooth

Q. Why can't I end a Bluetooth connection?

- A. If another device is pairing with your phone but not sending data, and leaves the connection open, then the only way to disconnect is to deactivate the Bluetooth link altogether. Go to Bluetooth and select the setting **Bluetooth**→ **Off**.

Q. Why can't I find my friend's Bluetooth enabled device.

- A. Check that both have activated Bluetooth.
Check that the distance between the two devices is not over 10 meters or that there are no walls or other obstructions between the devices.
Check that the other device is not in 'Hidden' mode.

Multimedia messaging

Q. What should I do when the phone tells that it cannot receive a multimedia message because memory is full?

- A. The amount of memory needed is indicated in the error message: *Not enough memory to retrieve message. Delete some data first*. To view what kind of data you have and how much memory the different data groups consume, go to **Installer** and select **Options**→*Memory details*. After you have freed up memory, the multimedia message center tries to send the multimedia messages again automatically.

Q. What should I do when the phone gives the message: *Unable to retrieve multimedia message. Network connection already in use.* ?

- A. End all active data connections. Multimedia messages cannot be received if another data connection using a different gateway address is active for WAP or e-mail.
- Q. How can I end the data connection when the phone starts a data connection again and again? The notes: *Retrieving message or Trying to retrieve message again* are shown briefly. What is happening?

- A. The phone is trying to retrieve a multimedia message from the multimedia messaging center.

Check that the settings for multimedia messaging have been defined correctly and that there are no mistakes in phone numbers or addresses. Go to **Messaging** and select **Options**→ **Settings**→ *Multimedia message*.

To stop the phone from making a data connection, you have the following options. Go to **Messaging** and select **Options**→ **Settings**→ *Multimedia message*.

- Select *On receiving msg.* → *Defer retrieval* if you want the multimedia messaging center to save the message to be retrieved later, for example, after you have checked the settings. After this change, the phone still needs to send information notes to the network. To retrieve the message later, select *Retr. immediately*.
- Select *On receiving msg.* → *decline message* – if you want to **decline** all incoming multimedia messages. After this change, the phone needs to send information notes to the network and the multimedia messaging center will delete all multimedia messages that are waiting to be sent to you.
- Select *Multimedia reception*→ *Off* – if you want to ignore all incoming multimedia messages. After this change the phone will not make any network connections related to multimedia messaging.

Images

Q. Is the format of the image I'm trying to open supported?

- A. See p. 73 for further information on the supported image formats.

Messaging

Q. Why can't I select a contact?

- A. If you cannot select a contact in the Contacts directory, the contact card does not have a phone number or an e-mail address. Add the missing information to the contact card in the Contacts application.

Calendar

Q. Why are the week numbers are missing?

- A. If you have changed the Calendar settings so that the week will start on some other day than Monday then the week numbers will not be shown.

WAP

Q. *No valid access point defined. Define one in WAP settings.*

- A. Insert proper WAP settings. Contact your WAP service provider for instructions.

Log

Q. Why does the log appears empty?

- A. You may have activated a filter and no communication events fitting that filter have been logged. To see all events, select **Options** → *Filter* → *All communication*.

PC connectivity

Q. Why do I have problems in connecting the phone to my PC?

- A. Make sure that PC Suite for Nokia 7610 is installed and running on your PC. See the **Installation guide for PC Suite** on the CD-ROM in the 'Software for PC' section. For further information on how to use the PC Suite for Nokia 7610, see the PC suite **online help**.

Access codes



Q. What is my password for the lock, PIN, or PUK codes?

- A. The default lock code is **12345**. If you forget or lose the lock code contact your phone dealer.
- If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

For information about passwords, contact your access point provider, for example, a commercial Internet service provider (ISP), WAP service provider, or network operator.

Application not responding

Q. How do I close an application that is not responding?

- A. Open the application switching window by pressing and holding . Then scroll to the application, and press  to close the application.

• **Nokia ONE-YEAR LIMITED WARRANTY**

Nokia Inc. ("Nokia") warrants that this cellular phone ("Product") is free from defects in material and workmanship that result in Product failure during normal usage, according to the following terms and conditions:

- 1 The limited warranty for the Product extends for ONE (1) year beginning on the date of the purchase of the Product. This one year period is extended by each whole day that the Product is out of your possession for repair under this warranty.
- 2 The limited warranty extends only to the original purchaser ("Consumer") of the Product and is not assignable or transferable to any subsequent purchaser/end-user.
- 3 The limited warranty extends only to Consumers who purchase the Product in the United States of America.
- 4 During the limited warranty period, Nokia will repair, or replace, at Nokia's sole option, any defective parts, or any parts that will not properly operate for their intended use with new or refurbished replacement items if such repair or replacement is needed because of product malfunction or failure during normal usage. No charge will be made to the Consumer for any such parts. Nokia will also pay for the labor charges incurred by Nokia in repairing or replacing the defective parts. The limited warranty does not cover defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts. Nokia's limit of liability under the limited warranty shall be the actual cash value of the Product at the time the Consumer returns the Product for repair, determined by the price paid by the Consumer for the Product less a reasonable amount for usage. Nokia shall not be liable for any other losses or damages. These remedies are the Consumer's exclusive remedies for breach of warranty.

- 5 Upon request from Nokia, the Consumer must prove the date of the original purchase of the Product by a dated bill of sale or dated itemized receipt.
- 6 The Consumer shall bear the cost of shipping the Product to Nokia in Melbourne, Florida. Nokia shall bear the cost of shipping the Product back to the Consumer after the completion of service under this limited warranty.
- 7 The Consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:
 - a) The Product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of Nokia, including damage caused by shipping.
 - b) The Product has been damaged from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, an Act of God, or battery leakage, theft, blown fuse, or improper use of any electrical source, damage caused by computer or internet viruses, bugs, worms, Trojan Horses, cancelbots or damage caused by the connection to other products not recommended for interconnection by Nokia.
 - c) Nokia was not advised in writing by the Consumer of the alleged defect or malfunction of the Product within fourteen (14) days after the expiration of the applicable limited warranty period.
 - d) The Product serial number plate or the accessory data code has been removed, defaced or altered.
 - e) The defect or damage was caused by the defective function of the cellular system or by inadequate signal reception by the external antenna, or viruses or other software problems introduced into the Product.

- 8 Nokia does not warrant uninterrupted or error-free operation of the Product. If a problem develops during the limited warranty period, the Consumer shall take the following step-by-step procedure:
- a) The Consumer shall return the Product to the place of purchase for repair or replacement processing.
 - b) If "a" is not convenient because of distance (more than 50 miles) or for other good cause, the Consumer shall ship the Product prepaid and insured to:
Nokia Inc., Attn: Repair Department
795 West Nasa Blvd.
Melbourne, FL 32901
 - c) The Consumer shall include a return address, daytime phone number and/or fax number, complete description of the problem, proof of purchase and service agreement (if applicable). Expenses related to removing the Product from an installation are not covered under this limited warranty.
 - d) The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer will be responsible for any expenses related to reinstallation of the Product.
 - e) Nokia will repair the Product under the limited warranty within 30 days after receipt of the Product. If Nokia cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, Nokia at its option, will provide a replacement Product or refund the purchase price of the Product less a reasonable amount for usage. In some states the Consumer may have the right to a loaner if the repair of the Product takes more than ten (10) days. Please contact the Customer Service Center at Nokia at the telephone number listed at the end of this warranty if you need a loaner and the repair of the Product has taken or is estimated to take more than ten (10) days.

- f) If the Product is returned during the limited warranty period, but the problem with the Product is not covered under the terms and conditions of this limited warranty, the Consumer will be notified and given an estimate of the charges the Consumer must pay to have the Product repaired, with all shipping charges billed to the Consumer. If the estimate is refused, the Product will be returned freight collect. If the Product is returned after the expiration of the limited warranty period, Nokia's normal service policies shall apply and the Consumer will be responsible for all shipping charges.
- 9 You (the Consumer) understand that the product may consist of refurbished equipment that contains used components, some of which have been reprocessed. The used components comply with Product performance and reliability specifications.
- 10 ANY IMPLIED WARRANTY OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR USE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING LIMITED WRITTEN WARRANTY. OTHERWISE, THE FOREGOING LIMITED WARRANTY IS THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. NOKIA SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OF SAVINGS OR REVENUE, LOSS OF DATA, PUNITIVE DAMAGES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF ANY SUBSTITUTE EQUIPMENT OR FACILITIES, DOWNTIME, THE CLAIMS OF ANY THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY, RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM BREACH OF THE WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL OR EQUITABLE THEORY, EVEN IF NOKIA KNEW OF THE LIKELIHOOD OF SUCH DAMAGES. NOKIA SHALL NOT BE LIABLE FOR DELAY IN RENDERING SERVICE UNDER THE LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE PRODUCT IS BEING REPAIRED.

- 11 Some states do not allow limitation of how long an implied warranty lasts, so the one year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental and consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.
- 12 Nokia neither assumes nor authorizes any authorized service center or any other person or entity to assume for it any other obligation or liability beyond that which is expressly provided for in this limited warranty including the provider or seller of any extended warranty or service agreement.
- 13 This is the entire warranty between Nokia and the Consumer, and supersedes all prior and contemporaneous agreements or understandings, oral or written, relating to the Product, and no representation, promise or condition not contained herein shall modify these terms.
- 14 This limited warranty allocates the risk of failure of the Product between the Consumer and Nokia. The allocation is recognized by the Consumer and is reflected in the purchase price.
- 15 Any action or lawsuit for breach of warranty must be commenced within eighteen (18) months following purchase of the Product.
- 16 Questions concerning this limited warranty may be directed to:
Nokia Inc.
Attn: Customer Service
7725 Woodland Center Blvd., Ste. 150
Tampa, FL 33614
Telephone: 1-888-NOKIA-2U (1-888-665-4228)
Facsimile: (813) 287-6612
TTY/TDD Users Only: 1-800-24-NOKIA (1-800-246-6542)
- 17 The limited warranty period for Nokia supplied attachments and accessories is specifically defined within their own warranty cards and packaging.

Appendix A

Message from the CTIA (Cellular Telecommunications & Internet Association) to all users of mobile phones.

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036.
Phone: (202) 785-0081

Safety is the most important call you will ever make.

A Guide to Safe and Responsible Wireless Phone Use

Tens of millions of people in the U.S. today take advantage of the unique combination of convenience, safety and value delivered by the wireless telephone. Quite simply, the wireless phone gives people the powerful ability to communicate by voice--almost anywhere, anytime--with the boss, with a client, with the kids, with emergency personnel or even with the police. Each year, Americans make billions of calls from their wireless phones, and the numbers are rapidly growing.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle--whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense---keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seatbelts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need.

When it comes to the use of wireless phones, *safety is your most important call.*

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember.

- 1 Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2 When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3 Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the

call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

- 5 Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6 Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip--dial only a few numbers, check the road and your mirrors, then continue.
- 7 Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix--they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8 Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations--with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
- 9 Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10 Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

The wireless industry reminds you to use your phone safely when driving.

For more information, please call 1-888-901-SAFE.
For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

© 2001 Cellular Telecommunications & Internet Association. All Rights Reserved. 1250 Connecticut Avenue, NW Suite 800, Washington, DC 20036. Phone: (202) 785-0081

Appendix B Message from the FDA (U.S. Food and Drug Administration) to all users of mobile phones.

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the

RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell mobile or PCS phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called cordless phones, which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has FDA done to measure the radiofrequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole

body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a accompanied hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

- FDA web page on wireless phones
<http://www.fda.gov/cdrh/phones/index.html>
- Federal Communications Commission (FCC) RF Safety Program
<http://www.fcc.gov/oet/rfsafety>
- International Commission on Non-Ionizing Radiation Protection
<http://www.icnirp.de>
- World Health Organization (WHO) International EMF Project
<http://www.who.int/emf>
- National Radiological Protection Board (UK)
<http://www.nrpb.org.uk/>

July 18, 2001 For updates: <http://www.fda.gov/cdrh/phones>

Index

A

- Access codes 55
- Access points 47
 - Settings 50
 - Settings, Advanced 52
- Access points, glossary explanation 48
 - Service provider, glossary explanation 48
- Accessories
 - Settings 60
- Alarm clock 137
 - Snooze 138
- Animations 78
- Answering a call 31
 - Automatic 61
- Application installer 147
- Applications 150
 - Installing a Java application 151
 - Java application settings 153
 - Opening a Java application 152
 - Uninstalling a Java application 152
- Attachments
 - Retrieving 110
 - Viewing 110
- Automatic answer 61

B

- Barring calls 59
- Battery information 165
- Battery saving mode 74
- Bluetooth 155
 - Cancelling pairing 160
 - Connection requests 158
 - Connection status indicators 159
 - Device icons 158, 159

- Disconnecting 161
- Factory set passcode 158
- Pairing 157
- Pairing requests 158
- Passcode, glossary explanation 158
- Receiving data 161
- Sending data 157
- Settings 156
- Short names for paired devices 160
- Bookmark, glossary explanation 141
- Business card, glossary explanation 70
- Sending 69

C

- Cache, glossary explanation 145
 - Emptying 145
- Calculator 133
- Calendar 127
 - Alarm 130
 - Calendar entry fields 128
 - Deleting many entries simultaneously 178
 - Sending entries 131
 - Settings 130
 - Stopping alarms 131
 - Symbols 129
 - Views 129
- Call barring 59
- Call cost limit
 - Resetting the counter 38
 - Set by a service provider 37
- Call register
 - See *Log*
- Calling 29, 29
- Calls

- Answering 31
- Charging units 37
- Conference calls 30
- Cost limit 37
- Dialled 36
- Diverting 32
- Duration 36
- International 29
- Missed 35
- Options during a call 33
- Received 35
- Rejecting 32
- Settings 45
- Settings for diverting 34
- Speed dialling 30
- Transferring 33
- Using the Contacts directory 29
- Camera 73
 - Battery saving mode 74
 - Image types 75
 - Memory card 76
 - Memory consumption 76
- CD-ROM 163
- Cell broadcast messages 113
- Cell info display 60
- Certificates 57
 - Trust settings 59
- Charges
 - Packet data 49
- Clearing memory
 - Calendar entries 178
 - Log information 179
- Clip
 - See *Video player*
- Clock 137
 - Alarm 137
 - Settings 137
- Composer 134, 134
 - Adjusting sound volume 134
- Adjusting tempo 134
- Changing tone style 134
- Listening to tones 134
- Computer connections 163
- Conference calls 30
- Connection indicators
 - Bluetooth 159
 - Data connections 21
 - Infrared 162
- Connection settings 47
- Contact cards
 - Adding voice tags 66
 - Assigning default numbers and addresses 66
 - Assigning speed dialling numbers 68
 - Attaching ringing tones 69
 - Changing voice tags 68
 - Deleting voice tags 68
 - Inserting pictures 65
 - Listening to voice tags 68
 - Removing ringing tones 69
 - Voice tags 66
- Contact groups 70
 - Adding many members at the same time 70
 - Adding ringing tones 69
 - Removing members 71
- Converter 135
 - Adding exchange rates 137
 - Converting currencies 136
 - Converting units 136
- Copying
 - Contacts between the SIM card and phone memory 63
 - Text 93
- Creating
 - Contact cards 63
- Cutting

Text 93

D

Data connections

Indicators 21

Settings

Date, settings 55

definition of terms 177

Deleting

Calendar entries 128

Contact cards 64

Delivery reports 88

Dialled numbers 36

Disconnecting

Bluetooth 161

Display settings 45

Diverting calls 32

DNS, Domain Name Service, glossary explanation 52

DTMF tones, glossary explanation 34

E

Editing

Calendar entries 127

Contact cards 64

Text 90

E-mail 100

Attachments 110

Deleting 111

Offline 108

Online 108

Opening 110

Remote mailbox 107

Retrieving from mailbox 108

Saving attachments 111

Settings 117

Emergency calls 170

Erasing

Call cost counters 38

Log 39

Recent calls register 36

F

Favourites 125

Adding a shortcut 125

File formats

JAD and JAR 148

SIS file 147

Supported 111

Fixed dialling 56

Folder 142

Folders, creating, organising items to folders 25

G

General settings 43

GIF animations 78

glossary 177

GPRS

See *Packet data*

H

Handsfree

See *Loudspeaker*

Headset 27

High speed data, glossary explanation 48

HSCSD

See *High speed data*

I

Idle state

See *Standby mode*

Image modes 75

Images 77

Formats 79

Full screen 78

Keyboard shortcuts when viewing images 79

Memory consumption 76

Moving the focus 79

Organising 79

Picture messages folder 82

Receiving from a digital camera

- 77
- Rotating 79
- Viewing image details 79
- Zooming 78
- Indicators 20
 - Data connections 21
- Info service 113
- Infrared 161
- Installing software 148
- Internet access points (IAP)
 - See *Access points*
- Internet service provider, glossary explanation
 - IP address, glossary explanation 52
 - ISDN, glossary explanation 52
 - ISP
 - See *Internet service provider*

J

- JAD and JAR files 148
- Java
 - See *Applications*.
- JPEG, glossary explanation 73

L

- Language
 - for writing 44
- Limit for call costs 37
- Lock code 55
- Log
 - Erasing contents 39
 - Filtering 39
 - Recent calls 35
 - Settings 39
- Loopset
 - Activating 61
- Loudspeaker
 - Activating 26
 - Turning off 27

M

- Mailbox 107

- Disconnecting 110
- Making calls 29, 29
- Memory card 40
 - Camera 76
 - Consumption 42
 - Format 42
 - Password 42
 - Restore 42
 - Video clips 40
 - Video player 84
- Memory low
 - Troubleshooting 178
 - Viewing memory consumption 42, 149
- Menu 22
 - Menu key 22
 - Rearranging the main Menu 23
- Messaging
 - Delivery reports 88
 - General settings 119
 - Inbox 101
 - Main view 87
 - Messages on the SIM card 113
 - Multimedia messages 96
 - My folders 106
 - Outbox 112
 - Picture messages 96
 - Saving picture message graphics 82
 - Settings 114
 - Short messages
 - Writing e-mail 100
 - Writing text 90
- Missed calls 35
- Modem
 - Using your phone as a modem 163
- Multimedia messages 96

- Playing sounds 104
- Re-playing sounds 104
- Viewing 103

- My folders 106

N

- Notes 137

O

- Offline 108

- Online 108

- Organising

 - Menu 23

- Outbox 112

P

- Packet data 48

 - Connection timer 39

 - Data counter 39

 - Glossary explanation 48

 - Pricing 49

 - Settings 54, 54

- Pairing, glossary explanation 158

- Password

 - Memory card 42

- Pasting

 - Text 93

- PC

 - Connecting 163

- Phonebook

 - See *Contacts*

- Pictures

 - Taking 73

 - Viewing 77

- PIN code 55

 - Unblocking 55

- Predictive text input 91

 - Tips 92

 - Turning off 93

- Prepaid SIM cards 37

- Prices for packet data 49

- Profiles 123

- Renaming 124

- Settings 123

R

- Received calls 35

- Receiving

 - Data via Bluetooth 161

 - Data via infrared 162

 - Ringling tones, Operator logos, and settings, see Smart messages*

- Recent calls register 35

 - Call charging units 37

 - Call cost limit 37

 - Call costs 37

 - Call duration 36

 - Dialled numbers 36

 - Erasing call lists 36

 - Missed calls 35

 - Received calls 35

- Recorder, recording sounds 138

- Rejecting calls 32

- Remote mailbox 107

 - Disconnecting 110

- Removing software 149

- Reports 88

- Resolution, glossary explanation 76, 76

- Ringling tones 123

 - Adding a personal ringling tone 69

 - Muting 32

 - Receiving in a smart message 104

 - Settings 123

S

- Safety information

 - Care and maintenance 166

 - Electronic devices 167

 - Emergency calls 170

- Operating environment 167
- Potentially explosive atmospheres 169
- Traffic safety 167
- Vehicles 169
- Screen saver
 - Settings 45, 45
- Search field 25
- Security
 - Access codes 55
 - Security certificates 57
 - Settings 55
- Sending
 - Calendar entries 131
 - Contact cards, Business cards 69
 - Data via Bluetooth 157
 - Data via infrared 162
 - Video clips 84
- Service command editor 114
- Service provider for data connections, glossary explanation
- Settings 43
 - Access codes 55
 - Accessories 60
 - Applications (Java™) 153
 - Bluetooth 156
 - Calendar 130
 - Call barring 59
 - Call diverting 34
 - Certificates 57
 - Clock 137
 - Connection 47
 - Date and time 55
 - Device settings 43
 - Display 45
 - E-mail 117
 - Fixed dialling 56
 - General settings for Messaging 119
 - Info service 119
 - Lock code 55
 - Log 39
 - Messaging 114
 - PIN code 55
 - Security 55
 - Short messages 114
 - Sounds 123
 - Video player 85
 - WAP service messages 119
- Short message service centre
 - Adding new 115
- Short messages 94
 - Writing and sending
- Shortcuts
 - in Favourites 125
 - in Images 79
- SIM card
 - Copying names and numbers 63
 - Messages 113
 - Names and numbers 40
 - Viewing messages on SIM 40
- SIS file 147
- Smart messages
 - Receiving 104
 - Sending 95
- Snooze 138
- Software
 - Installing 148
 - Removing 149
 - Transferring a .SIS file to your phone 148
- Sounds 123
 - Removing a personal ringing tone 69
- Speed dialling 68
 - Making calls 30
- Standby mode 19

- Indicators 20
- Settings 45
- Stopping
 - Alarm clock 137
 - Calendar alarm 131
- Switching between applications 23
- Symbols for
 - Calendar entries 129

T

- Taking pictures 73
- Text input 90
- Text messages
 - See *Short messages*
- Text templates 107
- The 142
- Thumbnails
 - In a contact card 65
- Time, settings 55
- To-do 131
- Tones 123
- Traditional text input 90
- Transferring calls 33
- Troubleshooting 178

U

- Unit converter 135
- USSD commands 114

V

- vCard format 70
- Video player
 - Formats 83
 - Memory card 84
 - Saving images 85
 - Sending video clips 84
 - Settings 85
 - Video clips 83
 - Video list 83
- Viewing
 - GIF animations 78
 - Images 77

- Voice dialling 66
- Voice key, see *Quick start guide*
 - Activating loudspeaker
 - Recording voice tags 66
- Voice mailbox
 - Changing the number 30
 - Diverting calls to voice mailbox 34

- Voice recorder 138

- Voice tags 66
 - Adding 66
 - Changing 68
 - Deleting 68
 - Listening 68
 - Making calls 67

- Volume control 26
 - During a call 29

W

- WAP
 - Browser 139
 - Browsing 143
 - Emptying the browser memory 145
 - Ending connections 144
 - Icons 141
 - Service message settings 119
 - Service messages 105
 - WAP access points, see *Access points*
- Writing 90
 - Predictive text input 91
 - Predictive text input, turning off 93
 - Traditional text input 90

Z

- Zooming 78